
Model 163.113/128/136/154/157/172/174/175

Up to 31.08.01


- 1 Driver airbag
- 2 Bolts
- 4 Electrical connector

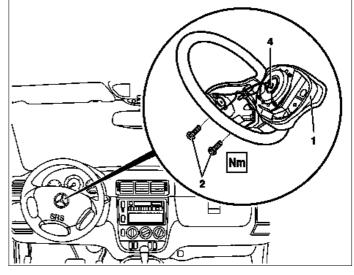

P91.60-2339-11



- 1 Driver airbag
- 3 Locks
- 4 Electrical connector
- 5 Electrical connector

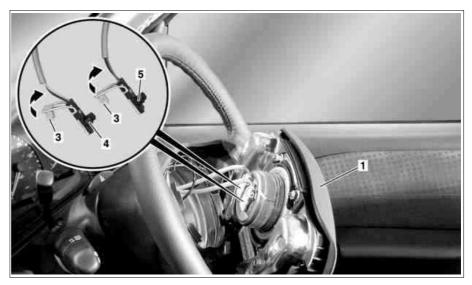


P91.60-2340-05


⚠ Warning	Risk of injury during testing and repair operations related to pyrotechnical components	Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts.	AS91.00-Z-0008-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Information, assessment and legal requirements when working with, handling and storing pyrotechnical components		AH91.00-Z-0000-10A
XX	Remove/install		
1	Switch off ignition and remove transmitter key		
2	Disconnect ground line of battery		AR54.10-P-0003A
3	Remove screw/bolts (2)	Mm Bolt, airbag to steering wheel	*BA91.60-P-1001-01A
		Screwdriver bit	*126589001000
4	Lift driver airbag (1) off steering wheel		
5.1	Release and disconnect electrical connector (4) from squib of driver airbag (1)	Model 163 up to 8/31/01	
		S Removal lever	*203589043300
5.2	Release and disconnect electrical connectors (4, 5) from squib of driver airbag (1)	Model 163 as of 9/1/01	
		S Removal lever	*203589043300
6	Remove driver airbag (1) from steering wheel		

7	Install in the reverse order		
4	Check		
8	Check the automatic resetting of the combination switch		
9	Check and erase vehicle fault memory using the diagnostic system	When replacing the driver airbag (1).	
₩ĨAD			AD00.00-P-2000-04A

Nm Airbag

Number	Designation		Model 163
BA91.60-P-1001-01A	Bolt, airbag to steering wheel	Nm	8

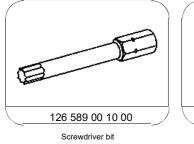

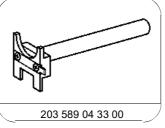

Removal lever

jf