


AR15.10-P-2000A	Remove, install camshaft Hall sensor	24.1.06
-----------------	--------------------------------------	---------

ENGINE 112.945 in MODEL 463.209 /232 /233 /244 /245 /250
ENGINE 112 in MODEL 129, 163, 170, 202, 203, 208, 209.361 /365 /461 /465, 210, 211.061 /261 /065 /265 /080 /082 /280 /282, 220, 230.467
ENGINE 113 (except 113.990 /991) in MODEL 129, 163, 202, 208, 209.375 /475 /376 /476, 210, 211.070 /270 /083 /283, 215, 220, 230.472 /474 /475
ENGINE 113.962 in MODEL 463.206 /240 /241 /247 /248 /249 /254
ENGINE 113.982 in MODEL 463.243 /246

Shown on engine 112 in model 220

B6/1 Camshaft Hall sensor

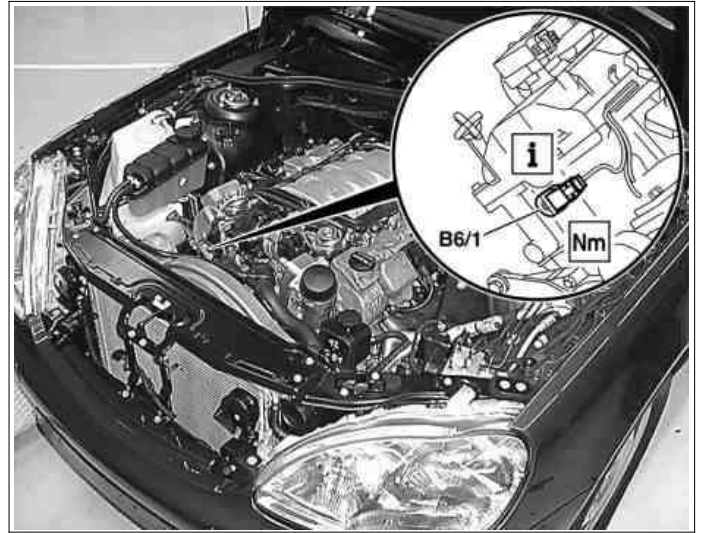

P15.10-0246-11

Fig. item etc.	Work instructions		
Nm	Camshaft Hall sensor to cylinder head		*BA15.10-P-1002-03A
B6/1	Camshaft Hall sensor	i Replace O-ring.	

Nm Position sensor

Number	Designation	Engines	Engines	Engine
		112.910/911/ 912/913/914/ 915/916/917/ 920/921/922/ 923/940/941/ 942/943/944/ 945/946/947/ 949/951/953/ 954/955/960/ 961/970/972/ 973/975/976	113.940/941/ 942/943/944/ 948/960/961/ 962/963/964/ 965/966/967/ 968/969/971/ 980/981/982/ 984/986/992/ 993/995	113.987/ 988/990/ 991
BA15.10-P-1002-03A	Camshaft Hall sensor to cylinder head	Nm 8	8	8