


TRANSMISSION 722.661 in MODEL 163.113  
 TRANSMISSION 722.662 in MODEL 163.154  
 TRANSMISSION 722.674 in MODEL 163.157  
 TRANSMISSION 722.663 in MODEL 163.172  
 TRANSMISSION 722.666 in MODEL 163.128 /174 /175

- 1 Connector
- 2 Connector
- N15/3 ETC control module

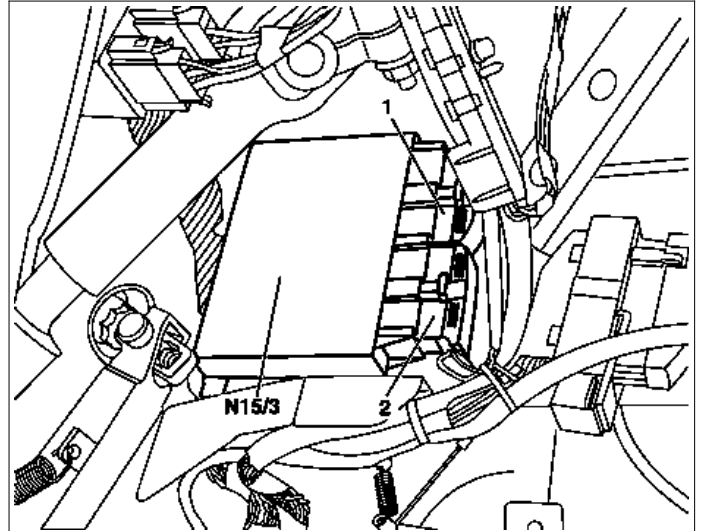

P27.19-2069-11

		<b>Remove/install</b>	
1		Turn ignition key to position "0"	<b>i</b> To avoid fault codes.
2		Remove cover below instrument panel on driver's side	AR68.10-P-1500GH
3		Turn plug side of ETC control module (N15/3) inwards and detach from bracket	<b>i</b> ETC control module (N15/3) is located on the driver's side of the vehicle next to the heating housing.
4		Unplug connectors (1, 2)	<b>!</b> Danger of breaking!
5		Remove ETC control module (N15/3)	<b>i</b> <b>Installation:</b> If a new ETC control module is installed, the coding information from the old control module must be copied to the new control module using STAR DIAGNOSIS.
6		Install in the reverse order	