
MODEL 163

| ble |
|-----|
| r |
| |

Right front door central locking motor (not illustrated) M14/5

Left front door central locking motor (not illustrated) M14/6

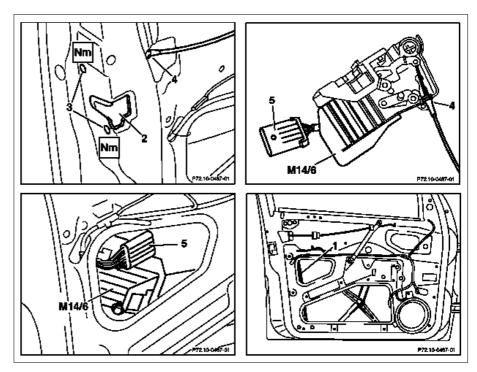

P72.10-0487-06

| XX | Removal, installation | | |
|----|--|--|---------------------|
| 1 | Remove door liner on front door | | AR72.10-P-1000GH |
| 2 | Remove outer door handle on front door | | AR72.10-P-2400GH |
| 3 | Remove bearing bracket for door handle | | |
| 4 | Pull door foil off of inner door panel | Installation: Replace damaged foil | |
| 5 | Remove window lift mechanism guide rail (1) | | |
| 6 | Unscrew screws (3) | Nm | *BA72.10-P-1004-01D |
| 7 | Disconnect connector (5) on central locking motor (M14/5 or M14/6) | | |
| 8 | Remove door lock (2) | i Remove door lock (2) downward through installation opening | |
| 9 | Unhook control cable (4) | | |
| 10 | Install in opposite order | | |

Nm Front door

| Number | Designation | Model 163 |
|--------------------|-----------------------|-----------|
| | | |
| BA72.10-P-1004-01D | Screw on door lock Nm | 8 |