
## AR72.12-P-2510GH Remove/install rear door lock

## MODELS 163.113 /136 /154 /157 /172 /174

- 1 Bolts
- Door lock
- 2 3 Bottom access cover
- 4 Connector

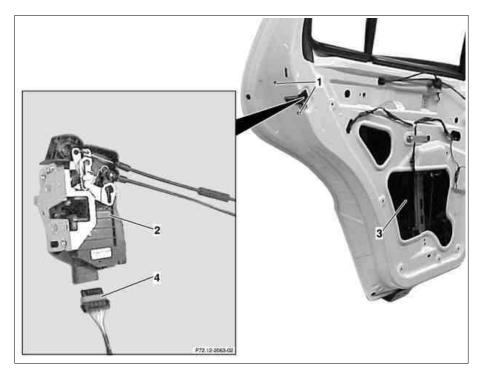

P72.12-2062-06

XX	Remove/install			
1	Remove door lining from rear door		AR72.12-P-1010GH	
2	Remove exterior door handle on rear door	<b>i</b> Remove bearing bracket through access cover in inner door panel.	AR72.12-P-2410GH	
3	Close crank window			
4	Undo plug-in connector (4)			
5	Unscrew screws (1) at door lock (2)	Hold door lock to prevent it from falling down into the door.	*BA72.12-P-1001-01C	
		S Torx bit set	*000589011000	
6	Remove door lock (2) through the bottom access cover (3)	i Pull window guide rail gently forward, so that the door lock can be guided behind it. iInstallation: position window guide rail correctly.		
7	Install in the reverse order	-		

## Nm Rear door

Numbe	r	Designation		Model Series 163
BA72.12-F	P-1001-01C	Bolt at door lock	Nm	8

