


MODEL 163 with CODE (240a) outside temperature indicator

B14 Outside temperature indicator temperature sensor

X67 Outside temperature indicator connector (2-pin)

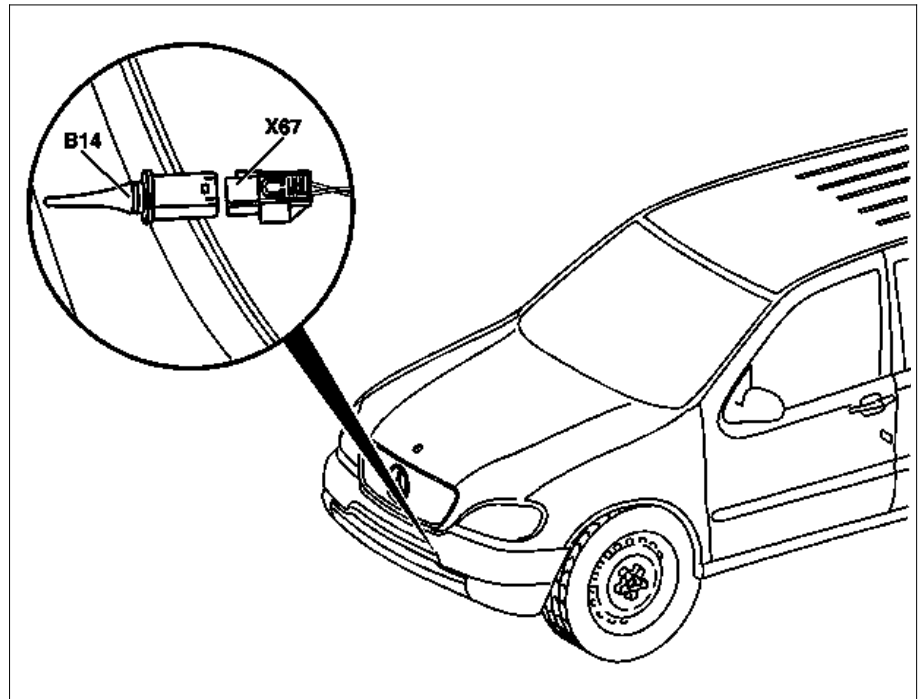

P54.30-0633-06

☒ ☒	Removing, installing		
1	Open engine hood and position upright		
2	Pull outside temperature indicator temperature sensor (B14) out of mount in bumper	i Installation: Insert temperature sensor in the mount the in bumper until it locks in position.	
3	Disconnect outside temperature indicator connector (2-pin) (X67) and remove outside temperature indicator temperature sensor		
4	Install in reverse order		
5	Carry out function test		