


AR27.60-P-0931GZ	Remove/install DIRECT SELECT selector lever	29.11.05
------------------	---	----------

Transmission 722.9 in MODEL 164

Shown on vehicle with electrically adjustable steering column, code 441

- 1 Driver airbag unit
- 2 Steering wheel
- 3 Clock spring contact
- 4 Steering angle sensor
- 5 Combination switch
- 6 Steering column adjustment switch
- 7 Bolts
- 8 DIRECT SELECT selector lever
- 9 CC [TPM] switch

N80 Steering column module

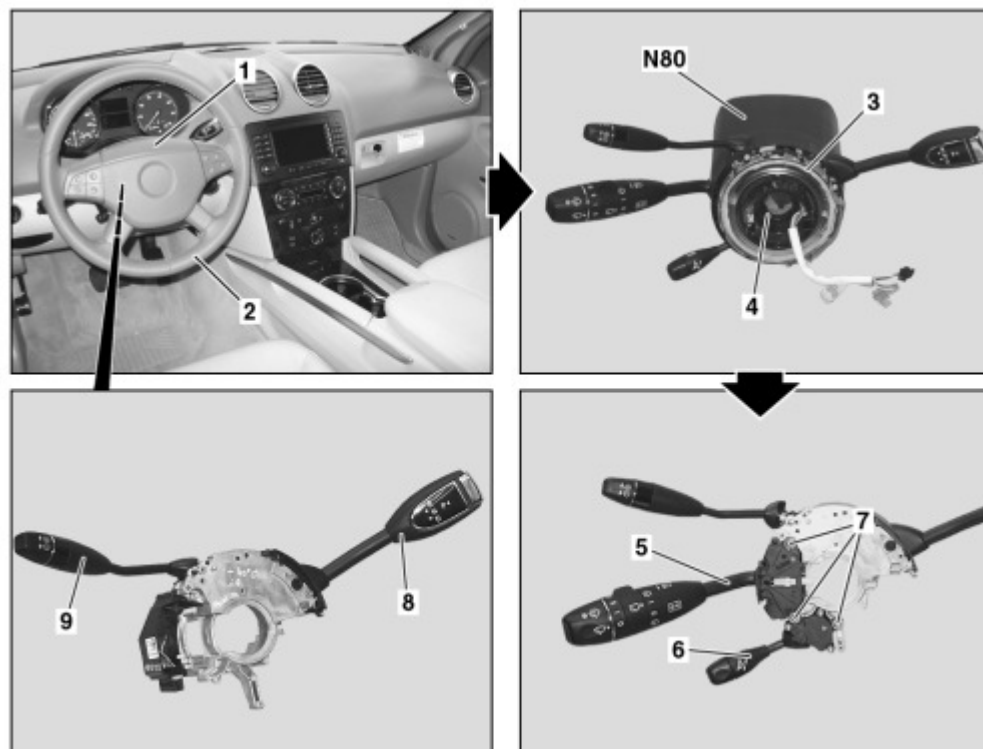

P27.60-2652-06

	<p>Remove/install</p>		
<p>⚠ Danger!</p>	<p>Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.</p>	<p>Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.</p>	<p>AS91.00-Z-0001-01A</p>
<p>⚠ Danger!</p>	<p>Risk of explosion caused by oxyhydrogen gas. Risk of poisoning</p>	<p>No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and</p>	<p>AS54.10-Z-0001-01A</p>

	and caustic burns caused by swallowing battery acid. Risk of injury caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	safety glasses. Only pour battery acid into suitable and appropriately marked containers.	
1	Disconnect battery ground cable		AR54.10-P-0003GZ
2	Remove driver airbag unit (1)		AR91.60-P-0660GZ
3	Remove steering wheel (2)		AR46.10-P-0100GZ
4	Removing jacket tube module (N80)		AR54.25-P-2802GZ
5	Remove clock spring contact (3)		AR46.10-P-0200GZ
6	Remove steering angle sensor (4)		AR46.10-P-0300GZ
7	Remove bolts (7)	i The number of bolts (7) is dependent on the equipment.	
8.1	Detach steering column adjustment switch (6)	i Only on vehicles with electrically adjustable steering column, code 441.	
		i Do not damage electrical connector.	
9	Remove combination switch (5).	i Do not damage electrical connector.	
10	Install in the reverse order	i DIRECT SELECT selector lever (8) and cruise control pushbutton switch (9) form a unit which cannot be disassembled.	
11	Perform basic programming		AR00.19-P-0200GZ
12	Carry out function check		