


AR91.60-P-0660GZ

Remove/install airbag unit on the steering wheel

29.11.05

MODEL 164

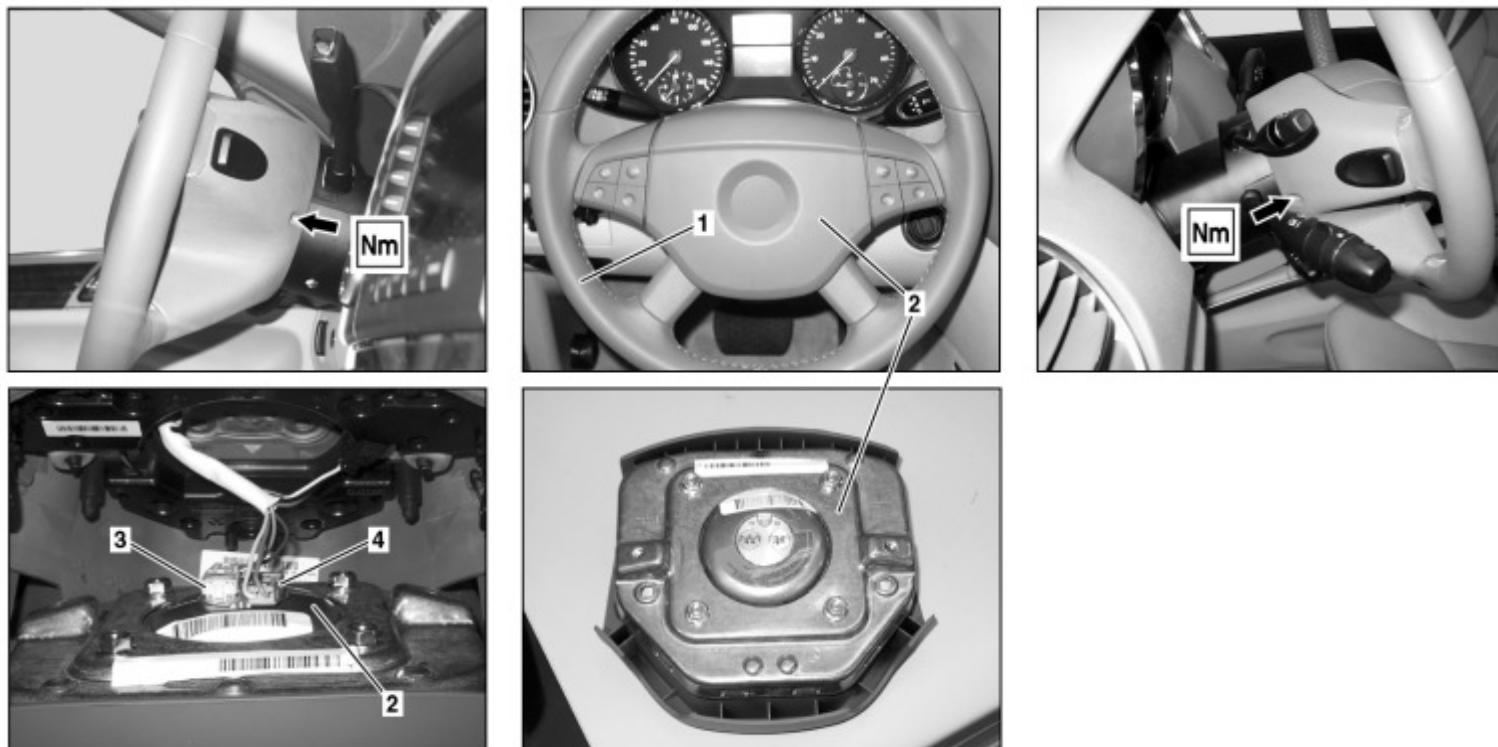




 


 
 




P91.60-2915-09

1 Steering wheel  
2 Driver airbag unit

3 Electrical connector  
4 Electrical connector


	<b>Remove/install</b>		
	<b>Risk of injury</b> caused by performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units,	<a href="#">AS91.00-Z-0001-01A</a>

		disconnect the power supply.	
 <b>Danger!</b>	<b>Risk of explosion</b> caused by oxyhydrogen gas. <b>Risk of poisoning and caustic burns</b> caused by swallowing battery acid. <b>Risk of injury</b> caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and safety glasses. Only pour battery acid into suitable and appropriately marked containers.	<a href="#">AS54.10-Z-0001-01A</a>
	Notes on performing repair, body work and welding on vehicles with airbags and ETR units		<a href="#">AH91.00-P-0002-01M</a>
	Information on preventing damage to electronic components due to electrostatic discharge		<a href="#">AH54.00-P-0001-01A</a>
	Assessment of airbag and belt tensioner units in accident vehicles		<a href="#">AH91.00-P-0006-01B</a>
	Legal regulations on handling and storing airbags and emergency tensioning retractors		<a href="#">AH91.00-P-0004-01A</a>
1.1	Disconnect jump-start sources or battery charger	 If connected.	
2	Move steering wheel (1) to straight-ahead position, disconnect battery ground line		<a href="#">AR54.10-P-0003GZ</a>
3	Insert screwdriver bit into openings (arrows) at back of steering wheel (1) and remove screws from driver airbag unit (2)		<a href="#">BA91.60-P-1003-01H</a>
		 Screwdriver bit	<a href="#">126 589 00 10 00</a>
4	Lift driver airbag unit (2) from steering wheel (1) and disconnect electrical connector (3, 4)	 <b>Installation:</b> The electrical connector (3, 4) must audibly latch into place when being plugged in.	
5	Remove driver airbag unit (2) from steering wheel (1)	 If the driver airbag unit (2) is replaced, the defective unit must be disposed of properly.	

		↓	
 <b>SOS</b>	Notes on disposing of airbag and emergency tensioning retractor units	All models	<a href="#">OS91.00-P-0001-01A</a>
6	Install in the reverse order		
7	Check restraint system using STAR DIAGNOSIS diagnostic system		
 <b>AD</b>	Connect STAR DIAGNOSIS and read out fault memory		<a href="#">AD00.00-P-2000-04A</a>
		STAR DIAGNOSIS diagnosis system	<a href="#">WE58.40-Z-1013-06A</a>

 **Airbag**

Number	Designation	Models 164.1/8
BA91.60-P-1003-01H	Bolt, airbag to steering wheel	Nm 8

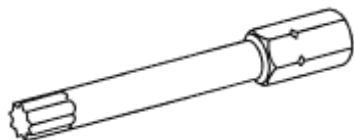

126 589 00 10 00

Screwdriver bit

**Workshop equipment/MB testers** (see Workshop Equipment Manual)

WE58.40-Z-1013-06A	STAR DIAGNOSIS Compact diagnosis system for passenger cars, order number 6511 1801 00
--------------------	---