



Document number: pe54.65-p-2102-97maa

Document title: Wiring diagram for backup camera control unit

Code:	Designation:	Position:
A0	Color code key	32L
A2	Radio	17L
A2	Radio	17L
A2/56	Radio and navigation unit	17L
A2/56	Radio and navigation unit	17L
A40/3	COMMAND operating, display and control unit	13L
A40/3	COMMAND operating, display and control unit	18L
A40/3	COMMAND operating, display and control unit	18L
A90/1	TV combination tuner (analog/digital)	21L
B84/3	Backup camera	25L
B84/3x1	Backup camera connector	24J
E3	Left taillamp	7L
E3e3	Left backup lamp	
F4	Load compartment fuse and relay box	2L
F4f37	Fuse 37	2L
N10/8	Rear SAM control unit	9L
N66/10	Backup camera voltage supply module	4A
N66/10	Backup camera voltage supply module	12A
N66/10	Backup camera voltage supply module	20A
U1	Valid for {[USA]}	12E
U154	Valid for 164.1	5E
U155	Valid for 164.8	
U20	Valid for all (except {[USA]} {[Japan]})	16E
U661	Valid for TV and video in rear	20E
W17/1	Ground (left rear seat)	5H
W6	Ground (left wheelhouse in luggage compartment)	7H
Z204/2	Circuit 31 right wheelhouse luggage compartment voltage distributor connector	
Z204/6	Circuit 31 left rear seat voltage distributor connector	5L

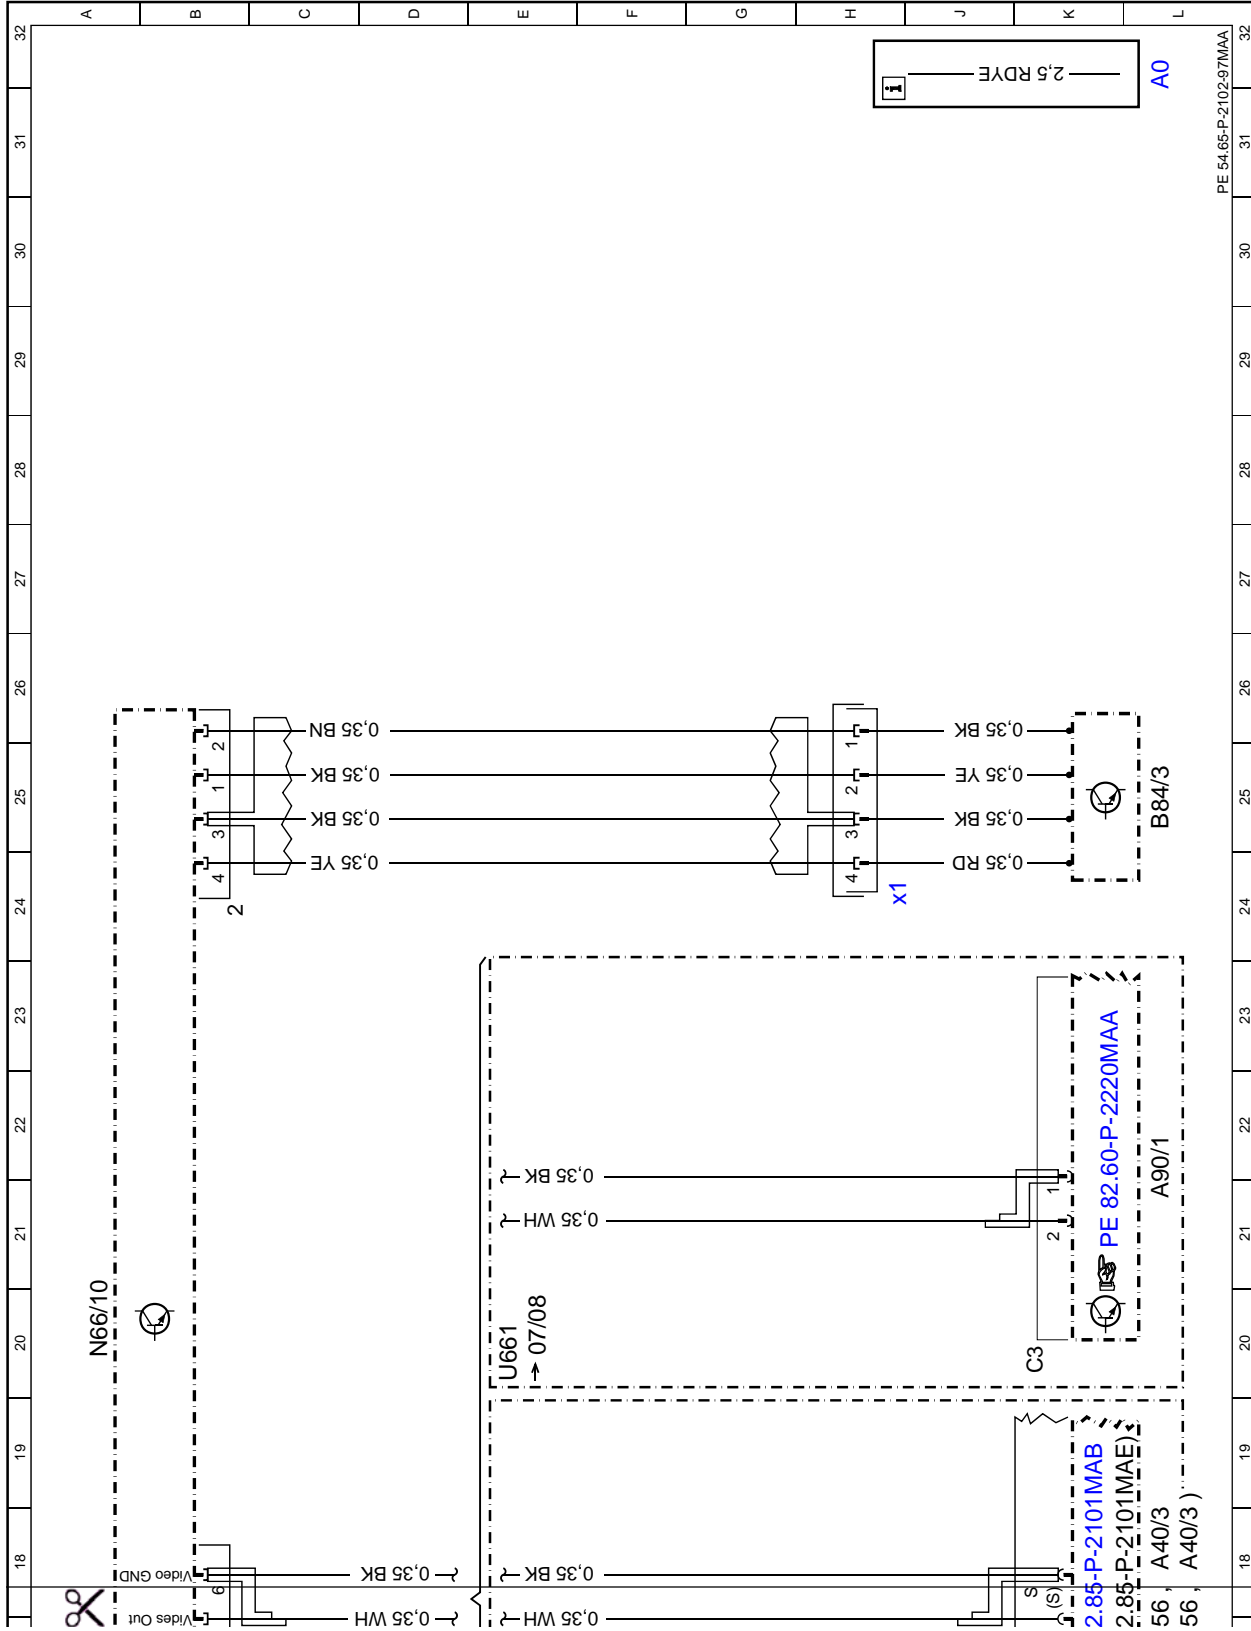

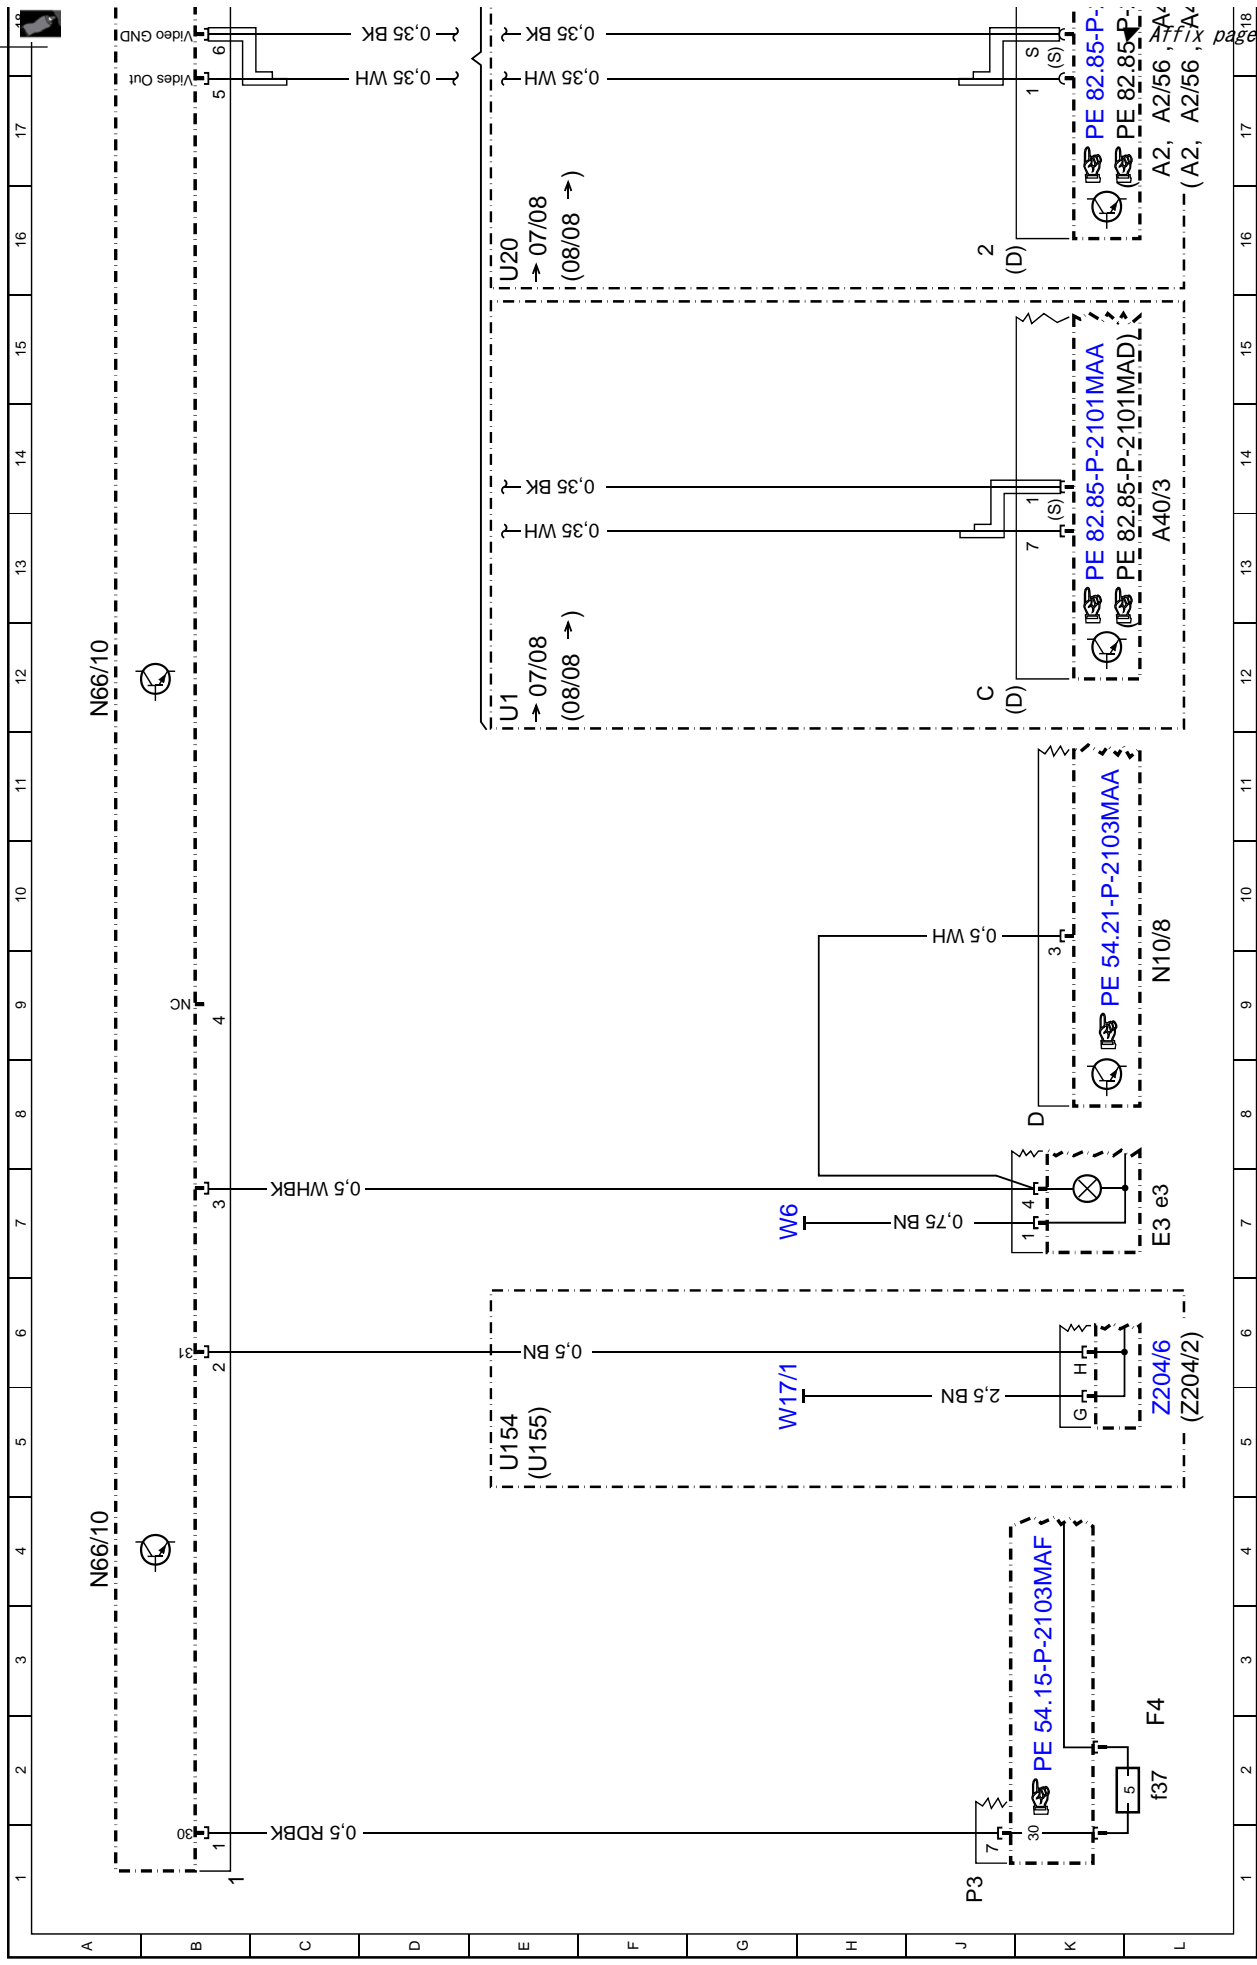

page 2 here ▼