


AR01.10-P-2405GZA

Remove/install engine cover

25.1.06

ENGINES 272, 273 in MODEL 164

- 1 Engine cover
- 2 Rubber mounts
- 2a Pin
- 3 Engine lifting eye
- 3a Clamp
- 4 Air filter housing
- 4a Clamps
- 4b Clamps

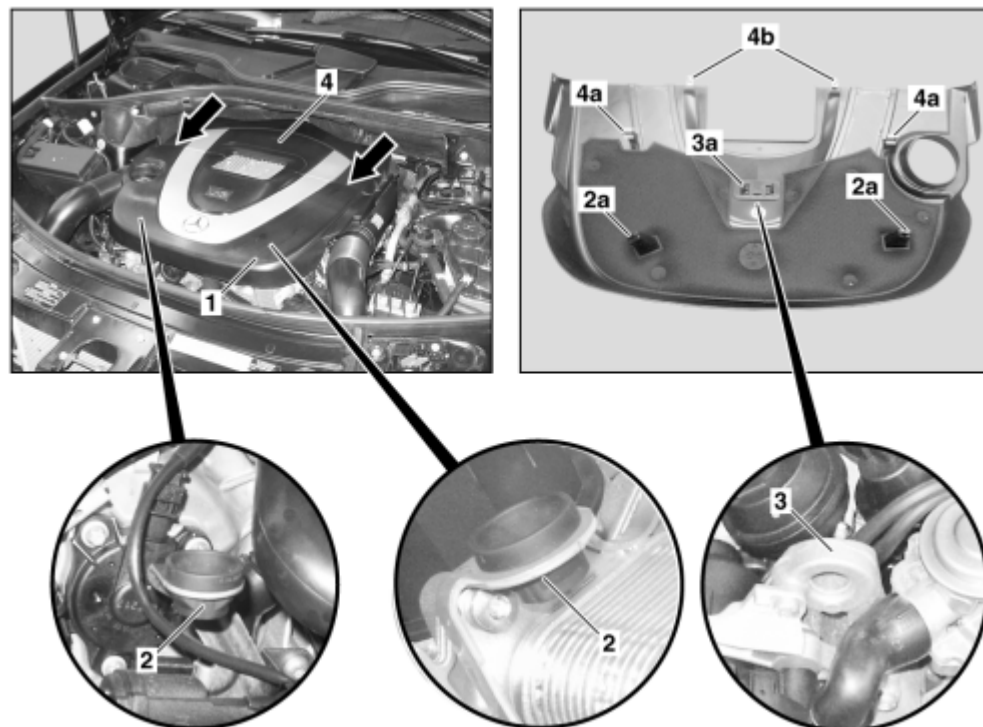

P01.10-2647-06

☒ ☒	Remove/install		
⚠ Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Open engine hood and move to upright position		AR88.40-P-1000GZ
2	Lift engine cover (1) off rubber mounts (2) and motor suspension lug (3)	i Detach studs (2a) from rubber	

		mountings and clamp (3a) for motor suspension lug (3).	
		i Installation: Apply liquid lubricant to rubber mounts (2).	
		Liquid lubricant (Naphtolen H)	BR00.45-Z-1003-06A
3	Unclip engine cover (1) on air filter housing (4) and remove to front	i Unclip clamps (4a, 4b) on air filter housing (4).	
4	Install in the reverse order		

Auxiliary repair materials

Number	Designation	Order number
BR00.45-Z-1003-06A	Liquid lubricant (Naphtolen H)	000 989 01 60