


10 to 18 Fuses**F3 Cockpit fuse box**

The cockpit fuse box is located in the cockpit on the passenger-side.

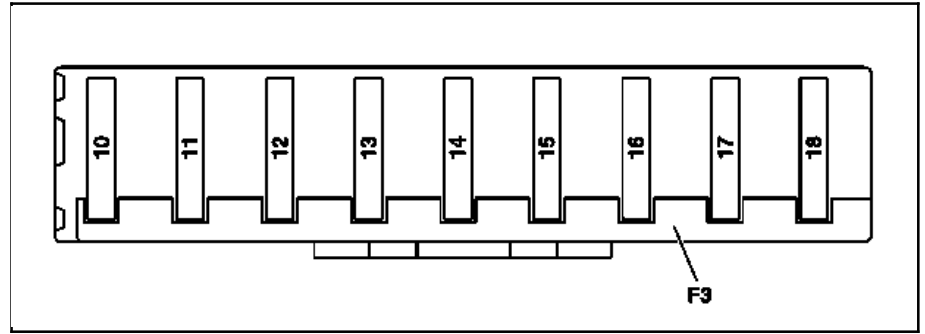

P54.15-2730-04

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
f10	30	1.0 RD	<ul style="list-style-type: none"> Booster blower electronic blower controller (N29/2) 	10
f11	30	0.5 RDWH	<ul style="list-style-type: none"> Instrument cluster (A1) 	5
f12	30	1.5 RDBK	<ul style="list-style-type: none"> AAC [KLA] control and operating unit (N22) 	15
f13	30	0.5 RDBU 0.5 RDBU	<ul style="list-style-type: none"> Steering column module (N80) Upper control panel control unit (N72/1/) 	5
F14	30	0.75 RDWH 0,75 RDWH	<ul style="list-style-type: none"> EIS [EZS] control unit (N73) <p>Valid for code 819 CD changer (6CDs):</p> <ul style="list-style-type: none"> CD changer (A2/6/) 	7.5
f15	30		<ul style="list-style-type: none"> Electronic compass (B26) 	5
F16	-	-	-	-
F17	-	-	-	-
F18	-	-	-	-