

AR68.40-P-0001GZ	Remove/install inside rearview mirror	29.11.05
------------------	---------------------------------------	----------

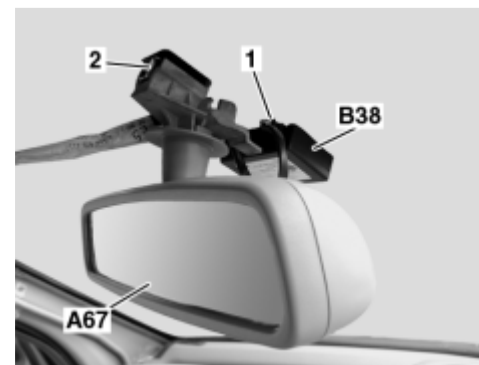
MODEL 164

1 Electrical connector





2 Catch

A67 Inside rearview mirror unit

B38 Rain sensor



P68.40-2086-01

	Remove/install		
1	Switch off ignition and remove transmitter key from EIS control unit	 On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
2	Remove front overhead control panel.	 Do not disconnect electrically	<a href="#">AR82.20-P-1100GZ</a>
3	Press catch (2) together from both sides		
4	Pull inside rearview mirror (A67) downward		
5.1	Disconnect electrical connector (1) from rain sensor (B38) and inside rearview mirror (A67)	 If present.	
6	Install in the reverse order		