


GF54.15-P-1256-07GZ	Fuse assignment of front prefuse box	Model 164	 GF
---------------------	--------------------------------------	-----------	--

1 Jump-starting point (starter-alternator, battery)

4 up to 8 Fuses

F32 Front prefuse

The prefuse box is located next to the air inlet of the air conditioning.

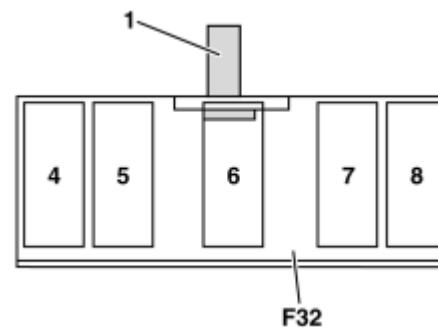

P54.15-2727-01

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
f6	30z	RD 4.0	● ESP control unit (N47-5)	40
f7	30z	12,0 RD	● AAC with integrated control additional fan motor (M4/7)	100
f8	30z	10,0 RD	● Engine compartment fuse and relay box (F58)	150