

Item	Designation	Coordin:
<u>A7/3</u>	Traction system hydraulic unit	1L 3E
<u>A7/3m1</u>	High pressure and return pump	3L 4D
<u>A7/3y6</u>	Left front axle solenoid valve (hold)	0L 1D
<u>A7/3y7</u>	Left front axle solenoid valve (release)	2L 3D
<u>A7/3y8</u>	Right front axle solenoid valve (hold)	0L 1D
<u>A7/3y9</u>	Right front axle solenoid valve (release)	2L 3D
<u>A7/3y10</u>	Left rear axle solenoid valve (hold)	0K 1C
<u>A7/3y11</u>	Left rear axle solenoid valve (release)	2K 3C
<u>A7/3y12</u>	Right rear axle solenoid valve (hold)	0K 1C
<u>A7/3y13</u>	Right rear axle solenoid valve (release)	2K 3C
<u>A7/3y18</u>	Front axle switchover solenoid valve	0J 1B
<u>A7/3y19</u>	Rear axle switchover solenoid valve	2J 3B
<u>A7/3y22</u>	Front axle inlet solenoid valve	0J 1B
<u>A7/3y23</u>	Rear axle inlet solenoid valve	2J 3B
<u>A7/7</u>	BAS brake booster	57L
<u>A7/7b1</u>	BAS diaphragm travel sensor	55L
<u>A7/7s1</u>	BAS release switch	58L
<u>A7/7y1</u>	BAS solenoid valve	59L
<u>B24/15</u>	Micromechanical turn rate sensor AY pickup	18L 32L
<u>B34</u>	ESP brake pressure sensor	54L
<u>F32</u>	Front prefuse	6L
<u>F32f6</u>	Fuse 6	5K
<u>F58</u>	Engine compartment fuse and relay box	10L
<u>F58f109</u>	Fuse 109	9L
<u>F58f115</u>	Fuse 115	10L
<u>L6/1</u>	Left front wheel speed sensor	53L
<u>L6/1x1</u>	Wheel speed sensor connector	52K
<u>L6/2</u>	Right front wheel speed sensor	51L
<u>L6/2x1</u>	Wheel speed sensor connector	50K
<u>L6/3</u>	Left rear wheel speed sensor	24L 38L
<u>L6/3x1</u>	Wheel speed sensor connector	24K 37K
<u>L6/4</u>	Right rear wheel speed sensor	26L 40L

<u>L6/4x1</u>	Wheel speed sensor connector	26K 39K
<u>N10</u>	Front SAM control unit	45L
<u>N10/8</u>	Rear SAM control module	22L 35L
<u>N47-5</u>	ESP control module	4A 12A 20A 29A 35A 44A 52A 59A
<u>S10/2</u>	Right front brake pad contact sensor	49L
<u>S10/2x1</u>	Right front brake pad contact sensor connector	49K
<u>S10/4</u>	Right rear brake pad contact sensor	47L
<u>S10/4x1</u>	Right rear brake pad contact sensor connector	47K
<u>S12</u>	Parking brake indicator switch	42L
<u>U77</u>	Valid for SPS [PML]	60A
<u>U151</u>	Valid for engine 113	27A
<u>U475</u>	Valid for M 272	13A
<u>U504</u>	Valid for DTR	16D 30D
<u>W2</u>	Ground (at right headlamp unit)	49E
<u>W15/2</u>	Ground (left footwell)	42E
<u>W17</u>	Ground (right rear seat)	48E
<u>W70</u>	Ground (ESP)	7E
<u>X25/2</u>	Engine compartment/interior compartment connector	14G 28G 45G
<u>X30/19</u>	Passenger-side voltage distributor (CAN C) connector	15L 29L
<u>X62/32</u>	Left rear axle electrical distributor connector	23J 37J
<u>X62/33</u>	Right rear axle electrical distributor connector	25J 39J 47G
<u>X62/35</u>	BWI [BBV]/rpm left front axle connector	52G
<u>X62/36</u>	BWI [BBV]/rpm right front axle connector	48G
<u>Y10</u>	SPS [PML] solenoid valve	60L
<u>Z6/47</u>	Ground (W15/2) connector sleeve	41G
<u>Z37/69</u>	Dynamic CAN bus (high) connector sleeve	17E 31E
<u>Z37/70</u>	Dynamic CAN bus (low) connector sleeve	16E 30E

