

Item	Designation	Coordinates
<u>A1</u>	Instrument cluster	8J
<u>A2/35</u>	Keyless Go trunk antenna	10F
<u>A2/39</u>	Keyless Go left rear door antenna	10F
<u>A2/41</u>	Keyless Go right rear door antenna	10F
<u>A2/60</u>	Cockpit Keyless Go antenna	10F
<u>A2/61</u>	Interior Keyless Go antenna	10G
<u>A2/93</u>	Roof antenna module	10A
<u>A7/7</u>	BAS brake booster	2C
<u>A8/1</u>	Transmitter key	3B
<u>A17/1</u>	Left front Keyless Go door handle	10G
<u>A17/2</u>	Right front Keyless Go door handle	10G
<u>A17/3</u>	Left rear Keyless Go door handle	10G
<u>A17/4</u>	Right rear Keyless Go door handle	10H
<u>A72</u>	Rear door locking unit	17C
<u>M14/5</u>	Right front door CL motor	19K
<u>M14/6</u>	Driver door CL motor	13K
<u>M14/8</u>	Left rear door CL motor	17C
<u>M14/9</u>	Right rear door CL motor	17D
<u>M14/10</u>	Fuel filler flap CL motor	17D
<u>N10</u>	Front SAM control unit	14E
<u>N10/8</u>	Rear SAM control module	17E
<u>N47-5</u>	ESP control module	5D
<u>N69/1</u>	Left front door control module	11J
<u>N69/2</u>	Right front door control module	17J
<u>N69/5</u>	Keyless Go control module	7F
<u>N73</u>	DI control module	2H
<u>S62</u>	ATA [EDW] hood switch	17D

