


AR82.25-P-4726GZ	Remove/install additional turn signal lamp	14.9.04
------------------	--	---------

MODEL 164

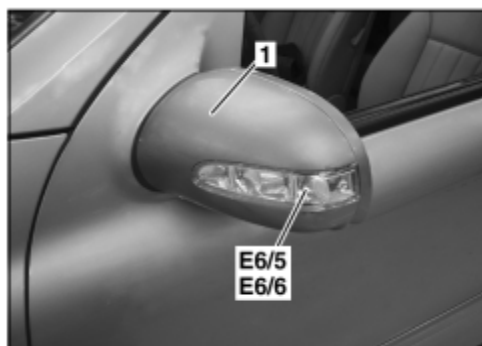

P82.25-2483-07


Illustrated on left outside rearview mirror

2 Screw
3 Ambient lamp

E6/5 Left outside mirror turn signal lamp

E6/6 Right outside mirror turn signal lamp

1 Outside rearview mirror cover

	Remove/Install		
1	Remove trim panel of outside mirror (1)		AR88.70-P-9040GZ
2	Remove bolt (2).		
3	Remove ambient lamp (3) from the outside mirror paneling (1)		
4	Remove the left outside mirror turn signal lamp (E6/5) or the right outside mirror turn signal lamp (E6/6) from the outside rearview mirror cover (1)		
5	Install in the reverse order		
6	Perform a function test		