

AR88.80-P-6000GZ

Remove/install longitudinal member paneling


26.1.06

MODEL 164.1


MODEL 164.8 except CODE (846) Running boards

**Shown on model 164.1**

- 1 Expansion clips
- 2 Front end cap
- 3 Longitudinal member paneling
- 4 Front retaining rail
- 5 Notches
- 6 Rear retaining rail
- 7 Nuts
- 8 Expansion clips
- 9 Rear end cap
- 10 Nuts

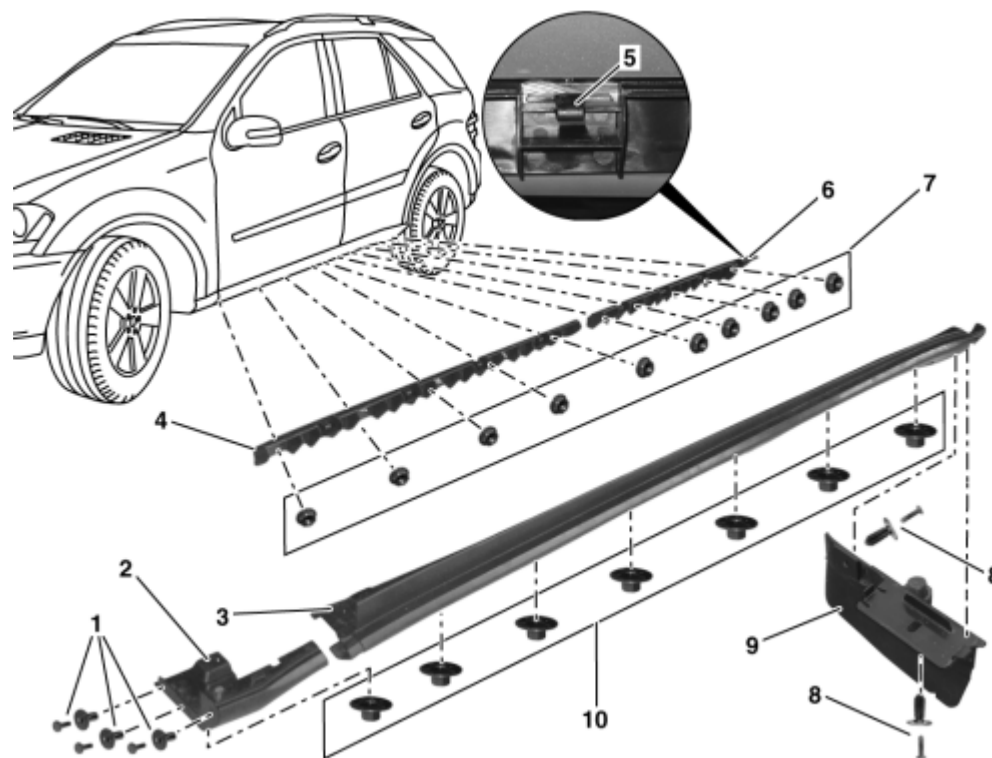

P88.80-2106-06

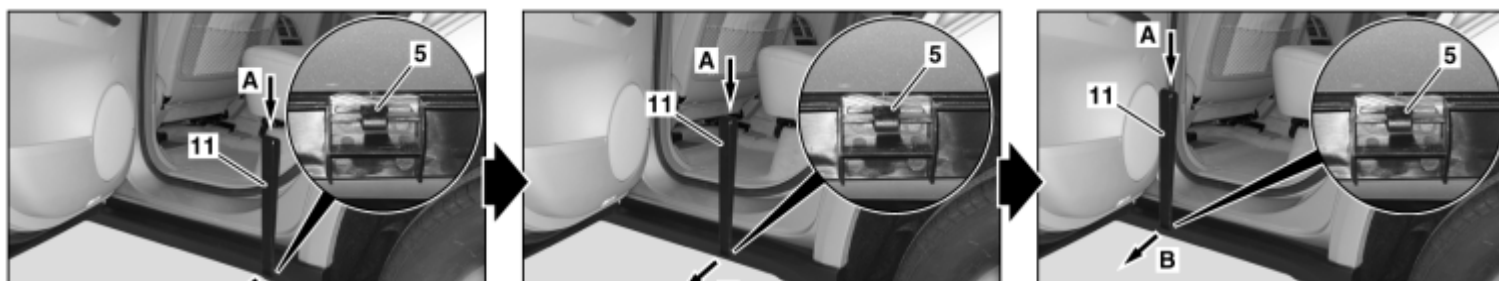






 





P88.80-2107-07


**Shown on model 164.1**

5 Notches

11 Long wedge

	<b>Remove</b>		
 <b>Danger!</b>	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer.	<a href="#">AS00.00-Z-0010-01A</a>
1	Raise vehicle on two-post lift	 Ensure that the support plates of the two-post lift are positioned on the attachment points of the vehicle so that all nuts (10) are exposed.	<a href="#">AR00.60-P-1000GZ</a>
		Two-post lift	<a href="#">WE58.40-Z-1001-05A</a>
2	Remove expansion clips (1, 8) and unscrew nuts (10)		
3	Remove front end cap (2) and rear end cap (9)		
4	Lower vehicle, remove from area of two-post lift and open both doors on corresponding side of vehicle	Two-post lift	<a href="#">WE58.40-Z-1001-05A</a>
5	Remove longitudinal member paneling (3) with long wedge (11)	 For this purpose, slide long wedge (11) between longitudinal member and longitudinal member paneling (3). Press in notches (5) one after another with long wedge (11) in direction of arrow (arrows A) and disengage longitudinal member paneling (3) in direction of arrow (arrow B).	
		 Do not press notches too far in with long wedge (11), otherwise, they can	

		break off.	
		 Start at rear, prevent part already detached from longitudinal member paneling (3) from arresting again, with additional mounting wedge.	
		 Long wedge	<a href="#">115 589 03 59 00</a>
		 Mounting wedge	<a href="#">110 589 03 59 00</a>
6	Remove nuts (7)		
7	Remove front retaining rail (4) and rear retaining rail (6)		
	<b>Install</b>		
8	Install front retaining rail (4) and rear retaining rail (6)		
9	Screw in nuts (7)		
10	Press longitudinal member paneling (3) to subconstruction until notches (5) arrest perceptibly		
11	Close doors, move vehicle between columns of two-post lift and raise vehicle with two-post lift	 Ensure that the plates of the two-post lift are positioned on the lift support points of the vehicle so that all nuts (10) are mounted.	
		Two-post lift	<a href="#">WE58.40-Z-1001-05A</a>
12	Install front end cap (2) and rear end cap (9)		
13	Install expansion clips (1, 8) and screw in nuts (10)	 Replace damaged expansion clips (1, 8).	
14	Lower vehicle	Two-post lift	<a href="#">WE58.40-Z-1001-05A</a>

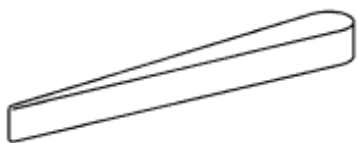

115 589 03 59 00

Long wedge



110 589 03 59 00

Mounting wedge

**Workshop equipment/MB testers** (see Workshop Equipment Manual)

WE58.40-Z-1001-05A	Two-post lift
--------------------	---------------