

AR68.30-P-4620GZ



Remove/install spare wheel well paneling

15.12.05

MODEL 164

*Illustrated on model 164.1 with load compartment package, code 942 and luggage compartment cover, code 723*


1 Spare wheel well paneling

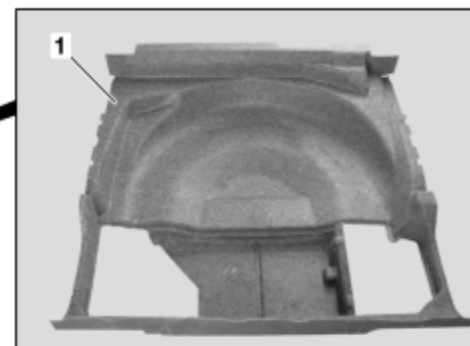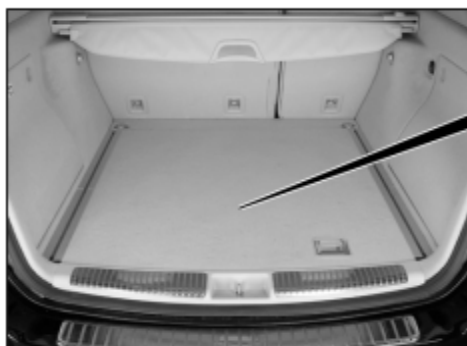

P68.30-3142-04

*Illustrated on model 164.1 with load compartment package, code 942 and luggage compartment cover, code 723*


2 Vehicle tool kit molded part

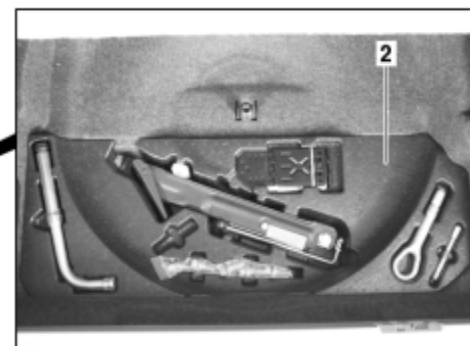

 




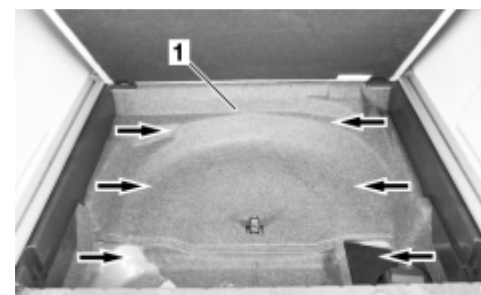

P68.30-3143-04

*Illustrated on model 164.1 with load compartment package, code 942 and luggage compartment cover, code 723*

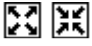1 Spare wheel well paneling



P68.30-3144-01

	Remove/install		
1	Open tailgate		
2.1	Open luggage compartment cover	 Only on vehicles with luggage compartment cover, code 723.	
3	Open load compartment floor and secure		
4.1	Remove spare wheel	 Only on vehicles with spare wheel on steel rim, code 669.	
5	Remove vehicle tool kit shaped part (2) upward	 <b>Installation:</b> Observe installation position.	
6	Remove rear door sill molding		<a href="#">AR68.30-P-4100GZA</a>
7.1	Remove clips from outer edges on spare wheel recess paneling (1).	 If present.	
8	Pull outer edges of spare wheel recess paneling (1) toward inside (arrows)	 Do not kink spare wheel recess paneling (1), danger of breakage!	
		 <b>Installation:</b> Ensure that outer edges of spare wheel recess paneling (1) are seated correctly.	
9	Install in the reverse order		