


AR91.60-P-0660GZ

Remove/install airbag unit on the steering wheel

29.11.05

MODEL 164

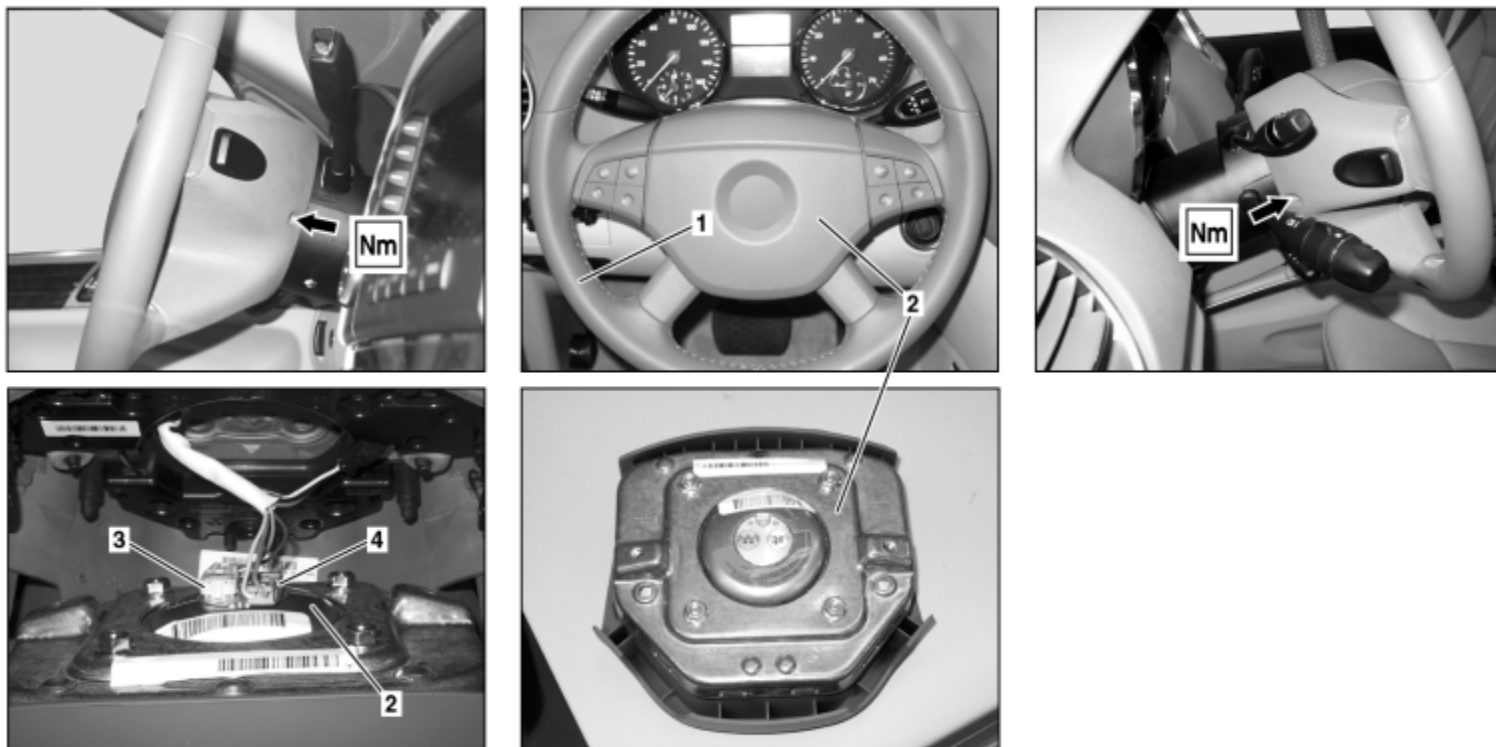




 


 
 




P91.60-2915-09

1 Steering wheel
2 Driver airbag unit

3 Electrical connector
4 Electrical connector


	Remove/install		
	Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units,	AS91.00-Z-0001-01A

		disconnect the power supply.	
 Danger!	Risk of explosion caused by oxyhydrogen gas. Risk of poisoning and caustic burns caused by swallowing battery acid. Risk of injury caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and safety glasses. Only pour battery acid into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
	Notes on performing repair, body work and welding on vehicles with airbags and ETR units		AH91.00-P-0002-01M
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Assessment of airbag and belt tensioner units in accident vehicles		AH91.00-P-0006-01B
	Legal regulations on handling and storing airbags and emergency tensioning retractors		AH91.00-P-0004-01A
1.1	Disconnect jump-start sources or battery charger	 If connected.	
2	Move steering wheel (1) to straight-ahead position, disconnect battery ground line		AR54.10-P-0003GZ
3	Insert screwdriver bit into openings (arrows) at back of steering wheel (1) and remove screws from driver airbag unit (2)		BA91.60-P-1003-01H
		 Screwdriver bit	126 589 00 10 00
4	Lift driver airbag unit (2) from steering wheel (1) and disconnect electrical connector (3, 4)	 Installation: The electrical connector (3, 4) must audibly latch into place when being plugged in.	
5	Remove driver airbag unit (2) from steering wheel (1)	 If the driver airbag unit (2) is replaced, the defective unit must be disposed of properly.	

		↓	
 OS	Notes on disposing of airbag and emergency tensioning retractor units	All models	OS91.00-P-0001-01A
6	Install in the reverse order		
7	Check restraint system using STAR DIAGNOSIS diagnostic system		
 AD	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A
		STAR DIAGNOSIS diagnosis system	WE58.40-Z-1013-06A

 Airbag

Number	Designation	Models 164.1/8
BA91.60-P-1003-01H	Bolt, airbag to steering wheel	Nm 8

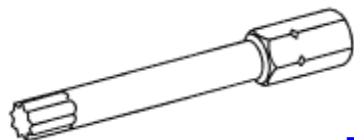

T30 Torx bit, 1/4"

126 589 00 10 00

Screwdriver bit

Workshop equipment/MB testers (see Workshop Equipment Manual)

WE58.40-Z-1013-06A	STAR DIAGNOSIS Compact diagnosis system for passenger cars, order number 6511 1801 00
--------------------	---