

Item	Designation	Coordina
<u>A1</u>	Instrument cluster	5G
<u>A7/7</u>	BAS brake booster	16B
<u>A8/1</u>	Transmitter key	6C
<u>B14</u>	Ambient temperature display temperature sensor	2H
<u>B34</u>	ESP brake pressure sensor	11B
<u>F32</u>	Front prefuse	20C
<u>F58kl</u>	Starter relay	15F
<u>G1</u>	Battery	20E
<u>G2</u>	Generator	18E
<u>M1</u>	Starter	16E
<u>N3/9</u>	CDI control module	13K
<u>N10</u>	Front SAM control unit	8B
<u>N22</u>	AAC pushbutton control module	2E
<u>N22/7</u>	Comfort AAC pushbutton control module	2E
<u>N47-5</u>	ESP control module	12B
<u>N73</u>	DI control module	5B
<u>N93</u>	Central gateway control module	8G
<u>U29</u>	Valid for outside temperature indicator	1E
U127	Valid for engine 272, engine 273 KE	15G
U151	Valid for engine 119	17G
U152	Valid for engine 156	15H
<u>U673</u>	Valid for Comfort AAC [K-KLA]	1E
<u>U880</u>	Valid for engine 642	12G
<u>Y3/8</u>	Electric control unit (VGS)	12D

