


100 to 125 Fuses

A to I Relays

F58 Engine compartment fuse and relay box

The engine compartment fuse and relay box is located in the right of the engine compartment.

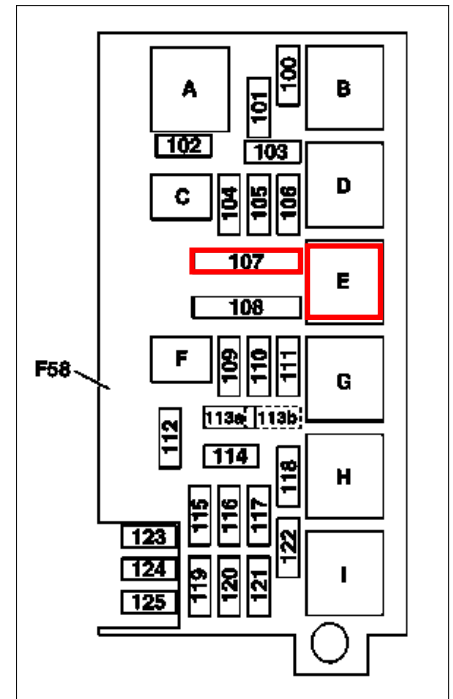

P54.15-2728-03

Relays	Designation
A	Wiper level relay 1/2
B	Wiper ON / OFF
C	Valid for engine 642: additional circulation pump for transmission oil cooling Valid for engine 156: engine coolant circulation pump (M45)
D	Terminal 87 engine
E	Secondary air injection pump
F	Fanfare horn
G	Air suspension compressor
H	Circuit 15
I	Starter