AR83.25-P-1170GZ Page 1 of 3

AR83.25-P-1170GZ Remove/install/replace heating water circulation pump	11.5.06	
--	---------	--

MODEL 164

## To simplify illustration radiator crossmember removed

1 Intake air pipe



P83.25-2259-01


## Main headlamps removed for better illustration. Shown on model 164.1

- 2 Electrical connector
- 3 Heating water hose
- 4 Heating water hose
- 5 Hose clamp
- 6 Hose clamp

M13 Heating water circulation pump

part #211 835 02 64



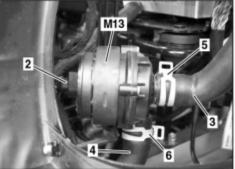

P83.25-2258-04

XX	Remove/install		
⚠ Danger!	Risk of injury to skin and eyes caused by scalding from contact with hot coolant spray. Risk of poisoning from swallowing coolant.	Do not open cooling system unless coolant temperature is below 90℃. Open cap slowly and release the pressure. Do not pour coolant into beverage containers.  Wear protective gloves, protective	AS20.00-Z-0001-01A

AR83.25-P-1170GZ

		clothing and safety glasses.	
<b>(b)</b>	Notes on coolant		<u>AH20.00-N-2080-</u> <u>01A</u>
1	Open engine hood and raise to vertical position		AR88.40-P-1000GZ
2	Reduce pressure in cooling system	To do this, carefully open reservoir cover and close again.	
3	Detach intake-air pipe (1) (arrow A)	i Only on left side.	
4	Disconnect electrical connector (2)		
5	Clamp off hot water hose (3, 4)	S Clamping device	000 589 40 37 00
6	Release hose clamp (5, 6)	Hose clamp pliers	WH58.30-Z-1020- 02A
7	Detach hot water hose (3, 4) from coolant circulation pump (M13)	i Collect escaping coolant.	
8	Detach coolant circulation pump (M13) from bracket		
9	Install in the reverse order		
10	Check coolant level, correct as required.	i See:↓	
		Drain/fill in coolant	
		Engine 113, 272, 273	AR20.00-P-1142GZ
		Engine 156	AR20.00-P-1142GZS
11	Inspect cooling system for leaks	Engine 113, 272, 273	AR20.00-P-1010GZ
		Engine 156	AR20.00-P-1010GZS

AR83.25-P-1170GZ Page 3 of 3



000 589 40 37 00

Clamping device

## Commercially available tools

Number	Designation	
WH58.30-Z-1020-02A	Hose clamp pliers (length 235 mm, clamping range 40 mm)	