



P54.65-2918-07

- 1 Electrical connector
- 2 Circlip
- 3 Sealing ring

- B8/7 Outer right rear PTS ultrasonic sensor
- B8/8 Inner right rear PTS ultrasonic sensor
- B8/9 Inner left rear PTS ultrasonic sensor
- B8/10 Outer left rear PTS ultrasonic sensor

	Remove/install		
1	Remove rear bumper		AR88.20-P-2200GZ
2	Disconnect electrical connector (1)		
3	Unlock the corresponding circlip (2) using the unlocking tool	Unlocking tool	*168589023100
4	Remove the outer right rear PTS ultrasonic sensor (B8/7) or inner right rear PTS ultrasonic sensor (B8/8) or inner left rear PTS ultrasonic sensor (B8/9) or outer left rear PTS ultrasonic sensor (B8/10) from the bumper	Installation: Check sealing ring (3) and replace if damaged.	
5	Install in the reverse order		

