


MODEL 164

Shown on bumper on model 164.1


- 1 Cable strap
- 2 Wiring harness

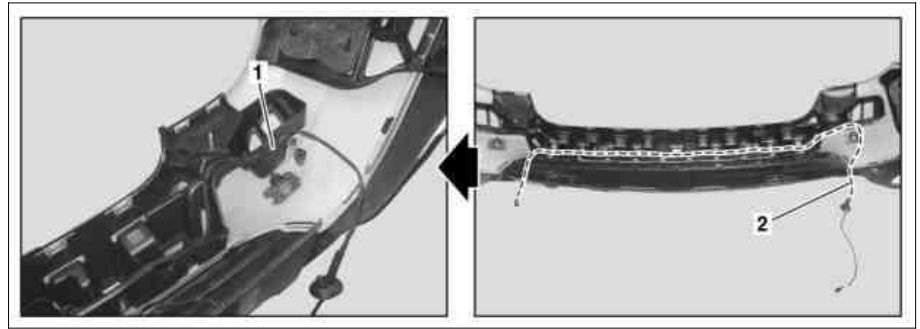

P88.20-2617-04

Shown on bumper on model 164.1


- 3 Clips
- 4 Impact absorber

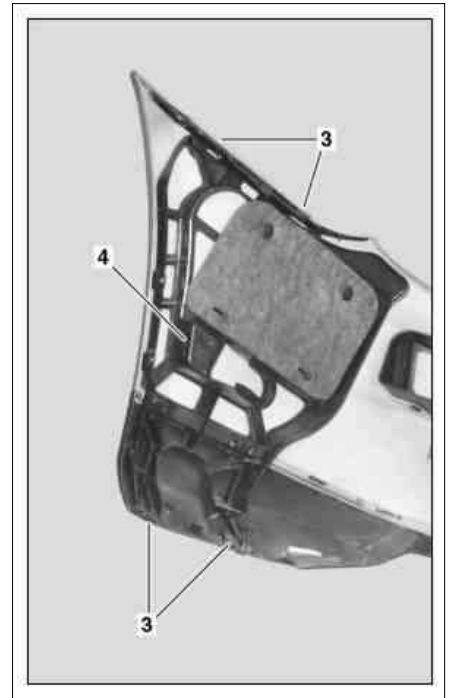


P88.20-2618-03

Illustrated on bumper on model 164.1

- 5 Clips
- 6 Center impact absorber

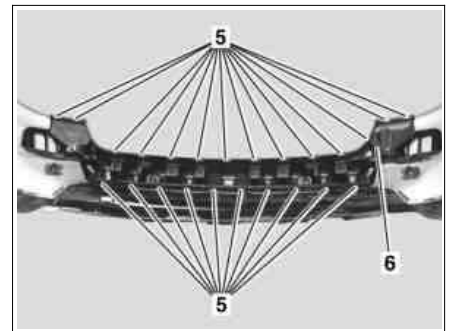

P88.20-2616-01

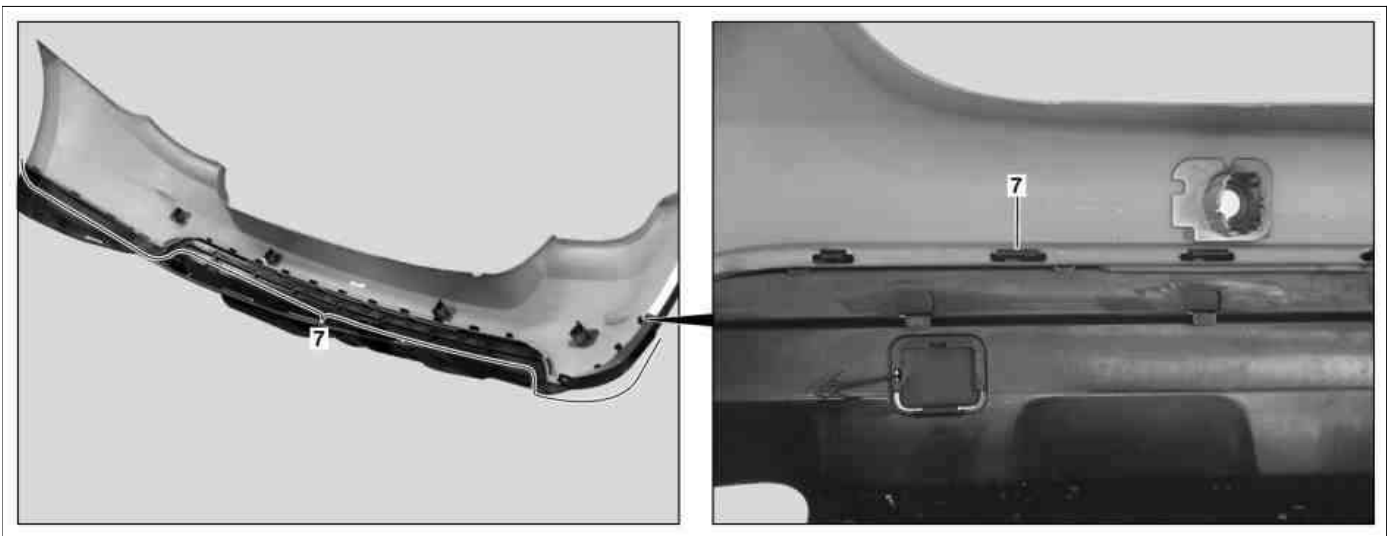


P88.20-2619-08

Shown on bumper on model 164.1







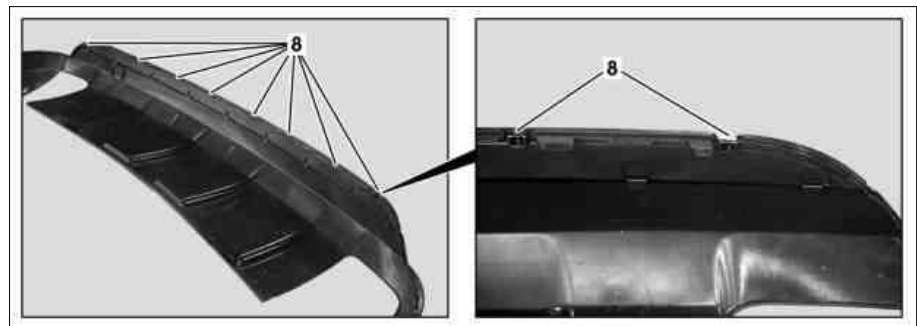




7 Retaining lug

Shown on bumper on model 164.1

8 Clips



 P88.20-2620-04

 	Disassemble/assemble		
1	Remove rear bumper		AR88.20-P-2200GZ
2.1	Remove rear bumper reflector	<p> Only on model 164.8.</p> <p> On left and right.</p>	AR88.20-P-2110GY
3.1	Remove Parktronic system sensors (PTS) in rear bumper	 Only on vehicles with Parktronic system (PTS), code 220.	AR54.65-P-0002GZ
4.1	Remove cable strap (1) and wiring harness (2).	<p> Only on vehicles with Parktronic system (PTS), code 220.</p> <p> Installation: Use new cable strap (1).</p>	
5	Remove clips (3) for impact absorber (4) on left and right and remove impact absorber (4) from bumper	 Number and position of clips (3) can vary depending on vehicle model.	
6	Remove clips (5) for center impact absorber (6) and remove center impact absorber (6) from bumper	 Number and position of clips (5) can vary depending on vehicle model.	
7	Loosen retaining lugs (7) and separate bumper halves	 Number and position of retaining lugs (7) can vary depending on vehicle model.	
8	Remove clips (8) and remove bumper insert	 Number and position of clips (8) can vary depending on vehicle model.	
9	Assemble in the reverse order		