

AR82.10-P-4905GZ

Removing and installing taillamp

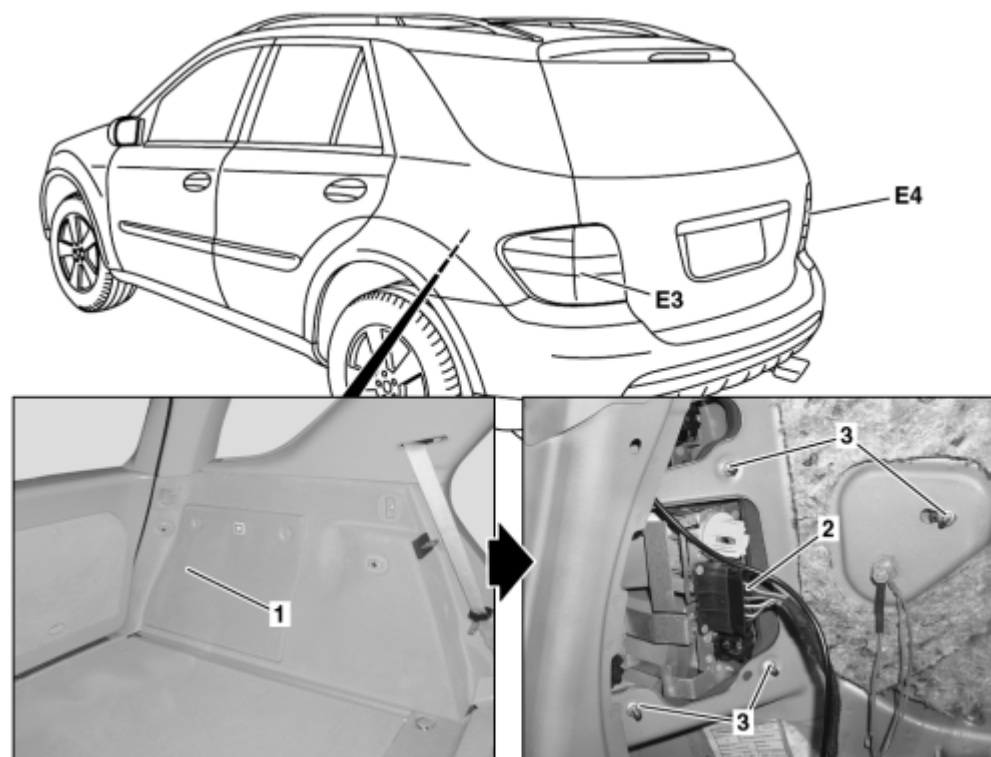
29.11.05

MODEL 164



**Illustrated on model 164.1**

- 1 Trim
- 2 Electrical connector
- 3 Nuts

E3 Left taillamp  
E4 Right taillamp



P82.10-3853-06

 	Remove/install		
1	Switch off ignition and remove transmitter key from EIS control unit	<p><b>i</b> On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).</p>	

2	Remove panel (1) in load compartment	<b>i</b> For model 164.8 remove left stowage compartment.	
3	Disconnect electrical connector (2)		
4	Unscrew nuts (3).	<b>i</b> For model 164.1 undo four nuts (3).	
		<b>i</b> For model 164.8 undo three nuts (3).	
5	Remove left taillamp (E3) or right taillamp (E4) to the rear	<b>i</b> <b>Installation:</b> Ensure that the rubber seal is secured properly.	
6	Install in the reverse order		