

<b>Item</b>	<b>Designation</b>	<b>Coorr</b>
<u>F4</u>	Load compartment fuse and relay box	4L
<u>F4f28</u>	Fuse 28	3L
<u>M20/1</u>	Steering column forward/back motor	10L
<u>M20/2</u>	Steering column raise/lower motor	12L
<u>M27/1</u>	Seat fore/aft adjustment motor, driver	21L
<u>M27/2</u>	Rear seat height adjustment motor, driver	23L
<u>M27/3</u>	Front seat height adjustment motor, driver	24L
<u>M27/4</u>	Head restraint motor, driver	17L
<u>M27/5</u>	Backrest angle adjustment motor, driver	14L
<u>M27/5x1</u>	Driver backrest angle adjustment motor connector 1	13J
<u>N32/1</u>	Driver front seat adjustment control module with memory	4A 12A 20A 28A 35A
<u>N32/19</u>	Left front dynamic seat control module	31L
<u>S91</u>	Driver seat with memory adjustment switch group	27L
<u>U750</u>	Valid for dynamic seat (DS [FDS])	30C
<u>W15/2</u>	Ground (left footwell)	3E
<u>X4/39</u>	Steering column module separation point	8E
<u>X30/7</u>	Voltage distributor (CAN) connector	7L
<u>X54/31</u>	Driver seat external power feed separation point	19L
<u>Z61/10</u>	Driver seat backrest/head restraint motor connector sleeve	16E

