

Item	Designation	Co
<u>F4</u>	Load compartment fuse and relay box	3L
<u>F4f27</u>	Fuse 27	2L
<u>M28/1</u>	Seat fore/aft adjustment motor, front passenger	17L
<u>M28/2</u>	Rear seat height adjustment motor, front passenger	19L
<u>M28/3</u>	Front seat height adjustment motor, front passenger	21L
<u>M28/4</u>	Head restraint motor, front passenger	13L
<u>M28/5</u>	Backrest angle adjustment motor, front passenger	11L
<u>M28/5x1</u>	Front passenger backrest angle adjustment motor connector 1	10.
<u>N32/2</u>	Front passenger front seat adjustment control module with memory	4A 12/ 20/ 28/
<u>N32/22</u>	Right front dynamic seat control module	27L
<u>S92</u>	Front passenger seat with memory adjustment switch group	23L
<u>U750</u>	Valid for dynamic seat (DS [FDS])	25C
<u>W15/1</u>	Ground (right footwell)	6H
<u>X30/4</u>	Right voltage distributor (CAN) connector	8L
<u>X54/32</u>	Front passenger seat external power feed separation point	15L
<u>Z61/11</u>	Front passenger seat backrest/head restraint motor connector sleeve	12E
<u>Z204/4</u>	Circuit 31 right footwell voltage distributor connector	5L

