

Item	Designation	Co
<u>F4</u>	Load compartment fuse and relay box	18 57
<u>F4f31</u>	Fuse 31	56
<u>F4f68</u>	Fuse 68	17
<u>F33</u>	Battery compartment prefuse box	4L
<u>F33f88</u>	Fuse 88	3L
<u>F33f89</u>	Fuse 89	2L
<u>F33f90</u>	Fuse 90	1L
<u>M18/9</u>	Left front seat cushion ventilation motor group	67
<u>M18/9x1</u>	Left front seat cushion ventilation motor group connector	67.
<u>M18/10</u>	Left front seat backrest ventilation motor group	69
<u>M18/10x1</u>	Left front seat backrest ventilation motor group connector	68.
<u>M18/11</u>	Right front seat cushion ventilation motor group	75
<u>M18/11x1</u>	Right front seat cushion ventilation motor group connector	74.
<u>M18/12</u>	Right front seat backrest ventilation motor group	77
<u>M18/12x1</u>	Right front seat backrest ventilation motor group connector	76.
<u>N10</u>	Front SAM control unit	4A 12.
<u>N25/7</u>	HS [SIH], seat ventilation and steering wheel heater control unit	20. 28. 36. 44. 52. 60. 68.
<u>N29/5</u>	Left front seat ventilation blower regulator	64
<u>N29/6</u>	Right front seat ventilation blower regulator	72
<u>N80</u>	Steering column module	60
<u>R13/1</u>	Left front seat heated cushion	11
<u>R13/2</u>	Left front backrest heated cushion	10
<u>R13/2x1</u>	Left front backrest heated cushion connector	10
<u>R13/3</u>	Right front seat heated cushion	14
<u>R13/4</u>	Right front backrest heated cushion	13
<u>R13/4x1</u>	Right front backrest heater element connector	13
<u>R13/5</u>	Left 2nd row seat heated cushion	32 40 48
<u>R13/6</u>	Left 2nd row backrest heated cushion	33 42 49
<u>R13/7</u>	Right 2nd row seat heated cushion	37 44 51
<u>R13/8</u>	Right 2nd row backrest heated cushion	38 45 53
<u>U154</u>	Valid for 164.1	

		39
		47
<u>U155</u>	Valid for 164.8	28
<u>U647</u>	Valid for seat ventilation	62
<u>U744</u>	Valid for steering wheel heater	54
<u>W15/1</u>	Ground (right footwell)	3E 13
<u>W15/2</u>	Ground (left footwell)	10 22
<u>W17/3</u>	Ground 2 (right rear seat)	24 29 34 49
<u>X18</u>	Interior/cockpit connector	60
<u>X30/4</u>	Right voltage distributor (CAN) connector	8L
<u>X30/7</u>	Voltage distributor (CAN) connector	26
<u>X55/3</u>	Left front seat contacting strip	9H 63
<u>X55/4</u>	Right front seat contacting strip	12 70
<u>X55/5</u>	Left rear seat adjustment contacting strip	29 39 41 47 49
<u>X55/6</u>	Right rear seat adjustment contacting strip	33 43 45 50 52
<u>X55/23</u>	Left 2/3 bench seat (2nd seat row) backrest/cushion separation point	31
<u>X55/24</u>	Right 1/3 bench seat (2nd seat row) backrest/cushion separation point	36
<u>Z61/12</u>	Left circuit 31 2nd seat row solder point	31
<u>Z61/13</u>	Right circuit 31 2nd seat row solder point	36
<u>Z204/4</u>	Circuit 31 right footwell voltage distributor connector	13
<u>Z204/5</u>	Circuit 31 left footwell voltage distributor connector (1)	10
<u>Z204/7</u>	Circuit 31 left footwell voltage distributor connector (2)	22 40 41 43 45

