

Item	Designation	C
<u>A45</u>	Fanfare horns and airbag clock spring contact	7
<u>A53</u>	Left side airbag sensor	7
<u>A54</u>	Right side airbag sensor	8
<u>B48/1</u>	Driver-side frontal acceleration sensor	1 1
<u>B48/2</u>	Passenger-side frontal acceleration sensor	1
<u>B48/7</u>	Driver door pressure sensor	4
<u>B48/8</u>	Front passenger door pressure sensor	4
<u>B48/9</u>	Rear door pressure sensor, driver-side	2
<u>B48/10</u>	Rear door pressure sensor, passenger-side	2
<u>F4</u>	Load compartment fuse and relay box	6
<u>F4f59</u>	Fuse 59	6
<u>F4f61</u>	Fuse 61	6
<u>F33</u>	Battery compartment prefuse box	2
<u>F33f84</u>	Fuse 84	1
<u>N2/7</u>	Restraint systems control module	4 1 2 2 3 4 5 5 6 7
<u>N80</u>	Steering column module	7
<u>N123/4</u>	Emergency call system control unit	5
<u>R12/4</u>	Front passenger airbag ignition squib 1	7
<u>R12/5</u>	Front passenger airbag ignition squib 2	7
<u>R12/6</u>	Left 2nd row ETR [GUS] squib	4
<u>R12/7</u>	Right 2nd row ETR [GUS] squib	4
<u>R12/9</u>	Driver side airbag squib	2
<u>R12/10</u>	Right side airbag ignition squib	1
<u>R12/11</u>	Left 2nd row side airbag ignition squib	2
<u>R12/12</u>	Right 2nd row side airbag ignition squib	3
<u>R12/13</u>	Driver airbag ignition squib 1	7
<u>R12/14</u>	Driver airbag ignition squib 2	7
<u>R12/16</u>	Left window airbag squib	3
<u>R12/17</u>	Right window airbag squib	3
<u>R12/26</u>	Front passenger belt force limiter	3
<u>R12/27</u>	Driver belt force limiter	3
<u>R12/35</u>	Left 3rd row ETR [GUS] squib	4
<u>R12/36</u>	Right 3rd row ETR [GUS] squib	4
<u>R46</u>	Driver buckle ETR squib	5
<u>R46x1</u>	Driver buckle emergency tensioning retractor squib connector	5

<u>R46/1</u>	Front passenger buckle ETR squib	5
<u>R46/1x1</u>	Front passenger buckle emergency tensioning retractor squib connector	5
<u>S68/1</u>	Driver seat belt buckle and seat belt warning switch	4
<u>S68/1x1</u>	Left front seat belt buckle and seat belt warning switch connector	4
<u>S68/2</u>	Front passenger seat belt buckle and seat belt warning switch	5
<u>S68/2x1</u>	Right front seat belt buckle and seat belt warning switch connector	5
<u>U151</u>	Valid for engine 113	1
<u>U154</u>	Valid for 164.1	2
<u>U155</u>	Valid for 164.8	3
		4
<u>U541</u>	Valid for TELE AID emergency call system	5
<u>U596</u>	Valid for rear side airbag	2
<u>U681</u>	Valid for all except M113	1
<u>U831</u>	Valid for crash-active head restraints	6
<u>W15/1</u>	Ground (right footwell)	1
<u>W15/2</u>	Ground (left footwell)	2
<u>W26</u>	Ground (restraint systems control module)	1
		4
		5
<u>X25/2</u>	Engine compartment/interior compartment connector	9
		1
		1
<u>X30/19</u>	Passenger-side voltage distributor (CAN C) connector	5
<u>X35/1</u>	Left front door separation point	4
<u>X35/2</u>	Right front door separation point	4
<u>X35/3</u>	Left rear door separation point	2
<u>X35/4</u>	Right rear door separation point	2
<u>X55/3</u>	Left front seat contacting strip	2
		4
		5
		6
<u>X55/4</u>	Right front seat contacting strip	1
		5
		5
		6
<u>X55/5</u>	Left rear seat adjustment contacting strip	2
		3
<u>X55/6</u>	Right rear seat adjustment contacting strip	2
		3
<u>X99/15</u>	Airbag separation point	7
<u>Y24/12</u>	Driver NECK-PRO head restraint solenoid	6
<u>Y24/12x1</u>	Driver NECK-PRO head restraint solenoid connector	6
<u>Y24/13</u>	Front passenger NECK-PRO head restraint solenoid	6
<u>Y24/13x1</u>	Front passenger NECK-PRO head restraint solenoid connector	6
<u>Z6/14</u>	Circuit 31 ground connector sleeve (left belt buckle)	9
		1
		4
<u>Z6/15</u>	Circuit 31 ground connector sleeve (right belt buckle)	5
<u>Z204/1</u>	Circuit 31 left wheelhouse luggage compartment voltage distributor connector	3

<u>Z204/3</u>	Circuit 31 right rear seat voltage distributor connector	2
<u>Z204/4</u>	Circuit 31 right footwell voltage distributor connector	1
<u>Z204/5</u>	Circuit 31 left footwell voltage distributor connector (1)	2