


MODEL 164.1 /8 up to Model Year 8

Shown up to 31.5.07 with code (600)  
Headlamp cleaning system

S1 Exterior lamp switch

#### Location

The rotary light switch is located at the left next to the steering wheel in the instrument panel.

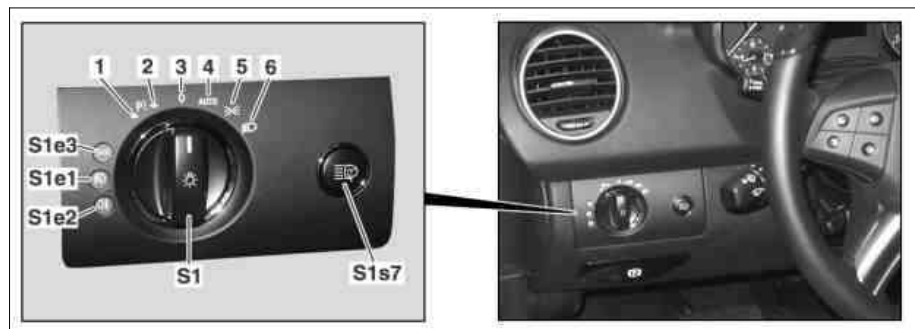

P82.20-2787-04

#### Design

The rotary light switch contains the following components:

- Exterior lights switch, with following positions
  - Left parking lights (1)
  - Right parking lights (2)
  - Off (3)
  - Auto on/off headlamps (4)
  - Standing light (5)
  - Low beam (6)
- Fog lamps indicator lamp (S1e1)
- Rear fog lamp indicator lamp (S1e2)
- Standing lamps indicator lamp (S1e3)
- HCS [SRA] switch (S1s7) (up to 31.5.07)  
(with code (600) Headlamp cleaning system)
- Headlamp range adjustment selector wheel (S1s8)  
(without code (615) Bi-xenon headlamp unit)

**i** Turning the rotary light switch to the low beams position and pulling it out until it latches into place switches on the left front fog lamp (E5/1) and the right front fog lamp (E5/2), pulling it out further to the second latching position also switches on the left rear fog light (E3e5) (on left-hand drive vehicles) or the right rear fog light (E4e5) (on right-hand drive vehicles).

The positions are read in over the local interconnect network (LIN) by the upper control panel control unit (N72/1).