

<b>Item</b>	<b>Designation</b>	<b>Coc</b>
<u>A16/1</u>	Right knock sensor 1	6L
<u>A16/2</u>	Left knock sensor 2	6L
<u>B2/5</u>	Hot film MAF sensor	43L
<u>B6/4</u>	Left intake camshaft Hall sensor	48L
<u>B6/5</u>	Right intake camshaft Hall sensor	45L
<u>B6/6</u>	Left exhaust camshaft Hall sensor	50L
<u>B6/7</u>	Right exhaust camshaft Hall sensor	47L
<u>B11/4</u>	Coolant temperature sensor	56L
<u>B28/5</u>	Pressure sensor downstream of air cleaner	52L
<u>B28/9</u>	Left intake manifold tumble flap position sensor	55L
<u>B28/10</u>	Right intake manifold tumble flap position sensor	53L
<u>B70</u>	Crankshaft Hall sensor	58L
<u>C4/1</u>	Radio interference suppression capacitor 1	16L
<u>C4/2</u>	Radio interference suppression capacitor 2	18L
<u>G2</u>	Generator	2L
<u>G3/3</u>	Left O2 sensor upstream TWC [KAT]	68L
<u>G3/3x1</u>	Left O2 sensor upstream TWC [KAT] connector	66J
<u>G3/4</u>	Right O2 sensor upstream TWC [KAT]	65L
<u>G3/4x1</u>	Right O2 sensor upstream TWC [KAT] connector	63J
<u>G3/5</u>	Left O2 sensor downstream TWC [KAT]	62L
<u>G3/5x1</u>	Left O2 sensor downstream TWC [KAT] connector	61J
<u>G3/6</u>	Right O2 sensor downstream TWC [KAT]	60L
<u>G3/6x1</u>	Right O2 sensor downstream TWC [KAT] connector	59J
<u>M1</u>	Starter	4L
<u>M16/6</u>	Throttle valve actuator	8L
<u>M16/6m1</u>	Actuator motor	8K
<u>M16/6r1</u>	Throttle valve actual value potentiometer	9K
<u>M16/6r2</u>	Drive actual value potentiometer	9K
<u>M16/6r3</u>	Actual value potentiometer (sliding contact 1)	8K
<u>M16/6r4</u>	Actual value potentiometer (sliding contact 2)	7K
<u>N3/10</u>	ME-SFI [ME] control module	4A 12A 20A 28A 36A 44A 52A 60A 68A 77A
<u>R4</u>	Spark plugs	11L 13L 15L 19L 22L 24L

<u>S43</u>	Oil level switch	41L
<u>T1/1</u>	Cylinder 1 ignition coil	11K
<u>T1/2</u>	Cylinder 2 ignition coil	13K
<u>T1/3</u>	Cylinder 3 ignition coil	15K
<u>T1/4</u>	Cylinder 4 ignition coil	19K
<u>T1/5</u>	Cylinder 5 ignition coil	21K
<u>T1/6</u>	Cylinder 6 ignition coil	23K
<u>W11w1</u>	Ground (engine - electrical line connected), left cylinder bank	18G 21G
<u>W11w2</u>	Ground (engine - electrical line connected), right cylinder bank	13G 17G
<u>W16/3</u>	Ground (output ground - component compartment - left)	25L
<u>X26</u>	Interior and engine wiring harness connector	25G
<u>X205</u>	Tumble flap/variable intake manifold switchover valves connector	72G
<u>Y10/1</u>	Power steering pump pressure regulator valve	71L
<u>Y16/2</u>	Heating system shutoff valve	77L
<u>Y22/6</u>	Variable intake manifold switchover valve	73L
<u>Y22/9</u>	Intake manifold tumble flap switchover valve	72L
<u>Y49/4</u>	Left camshaft intake solenoid	40L
<u>Y49/5</u>	Right camshaft intake solenoid	31L
<u>Y49/6</u>	Left camshaft exhaust solenoid	39L
<u>Y49/7</u>	Right camshaft exhaust solenoid	29L
<u>Y59/2</u>	Air injection valve	75L
<u>Y62</u>	Injectors (LH-SFI, HFM-SFI, PEC [LH, HFM, PMS])	35L
<u>Y62y1</u>	Fuel injector cylinder 1	34L
<u>Y62y2</u>	Fuel injector cylinder 2	33L
<u>Y62y3</u>	Fuel injector cylinder 3	32L
<u>Y62y4</u>	Fuel injector cylinder 4	37L
<u>Y62y5</u>	Fuel injector cylinder 5	35L
<u>Y62y6</u>	Fuel injector cylinder 6	36L
<u>Y110</u>	Three-disk thermostat valve	69L
<u>Z5z2</u>	Connector sleeve (solder joint in harness)	54G
<u>Z6z1</u>	Ground connector sleeve	12E
<u>Z6z2</u>	Ground connector sleeve	21E 25E
<u>Z6/26</u>	Sensor supply connector sleeve	60G
<u>Z7/35z1</u>	Circuit 87M1e connector sleeve	15E 26E
<u>Z7/35z2</u>	Circuit 87M1e connector sleeve	20E
<u>Z7/36z1</u>	Circuit 87M2e connector sleeve	58G 66G 74G
<u>Z7/36z2</u>	Circuit 87M2e connector sleeve	27E 70G
<u>Z7/38z1</u>	Circuit 87 M1i connector sleeve	31G 44G

<u>Z7/38z2</u>	Circuit 87 M1i connector sleeve	28E 38G 49G
<u>Z7/43</u>	Sensor ground connector sleeve	52G
<u>Z7/43z1</u>	Sensor ground connector sleeve	45G
<u>Z7/44</u>	Sensor ground connector sleeve	48G 56G