

<b>Item</b>	<b>Designation</b>	<b>Coo</b>
<u>E6/6</u>	Right exterior mirror turn signal lamp	31K
<u>E17/4</u>	Right front door entrance and exit lamp	21L
<u>E17/12</u>	Right front door inside handle illumination	18L
<u>F4</u>	Load compartment fuse and relay box	3L
<u>F4f26</u>	Fuse 26	2L
<u>M10/4</u>	Right front power window motor	14L
<u>M14/5</u>	Right front door CL motor	9L
<u>M21/2</u>	Right electrically adjustable and heated exterior mirror	33L
<u>M21/2e1</u>	Right outside mirror ambient lamp	32L
<u>M21/2h1</u>	Automatic dimming mirror	35L
<u>M21/2m1</u>	Mirror up/down adjustment motor	27L
<u>M21/2m2</u>	Mirror in/out adjustment motor	28L
<u>M21/2m3</u>	Mirror fold-in motor	30L
<u>M21/2r1</u>	Mirror heater	29L
<u>M21/2x1</u>	Right electrically adjustable and heated exterior mirror connector	27H
<u>M21/2x2</u>	Right electrically adjustable and heated exterior mirror connector	33H
<u>N69/2</u>	Right front door control module	4A 12A 20A 28A 34A
<u>S21/2</u>	Front passenger power window switch	25L
<u>S85/6</u>	Right Interior CL [ZV] switch	22L
<u>U656</u>	Valid for interior light package	18A
<u>W15/1</u>	Ground (right footwell)	8L
<u>X30/4</u>	Right voltage distributor (CAN) connector	6L
<u>X35/2</u>	Right front door separation point	1E 8H
<u>Z6/36</u>	Right front door ground connector sleeve	8E

