


AP83.00-P-8381GZ	Replace dust filter for heating/air conditioning	21.2.06
------------------	--	---------

MODEL 164.1 /8 with CODE (580) Automatic air conditioning

- 1 Air filter housing
- 2 Cover
- 3 Dust filter
- 4 Dust filter

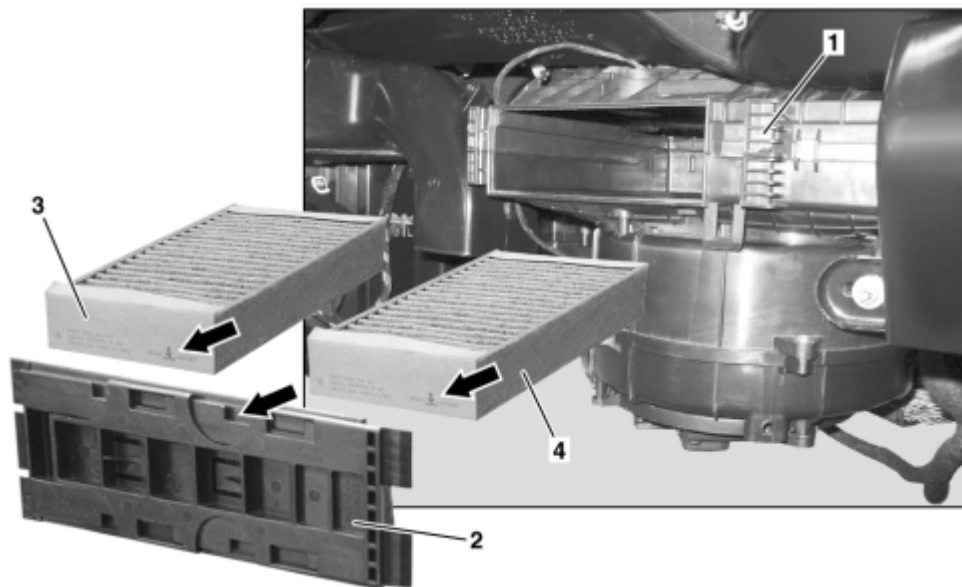

P83.00-2161-05

	Remove/install		
1	Remove glove compartment		
	Remove/install glove compartment		AR68.10-P-1400GZ
2	Release cover (2) of dust filter housing (1) in direction of arrow and remove		
3	Remove dust filter (3)	Installation: Note the installation position of the dust filter (3) (arrow).	
4	Remove dust filter (4)	Installation: Note the installation position of the dust filter (4) (arrow).	
5	Install in the reverse order		