



AR00.60-P-1000GZ	Lift/jack up vehicle	23.11.05
------------------	----------------------	----------





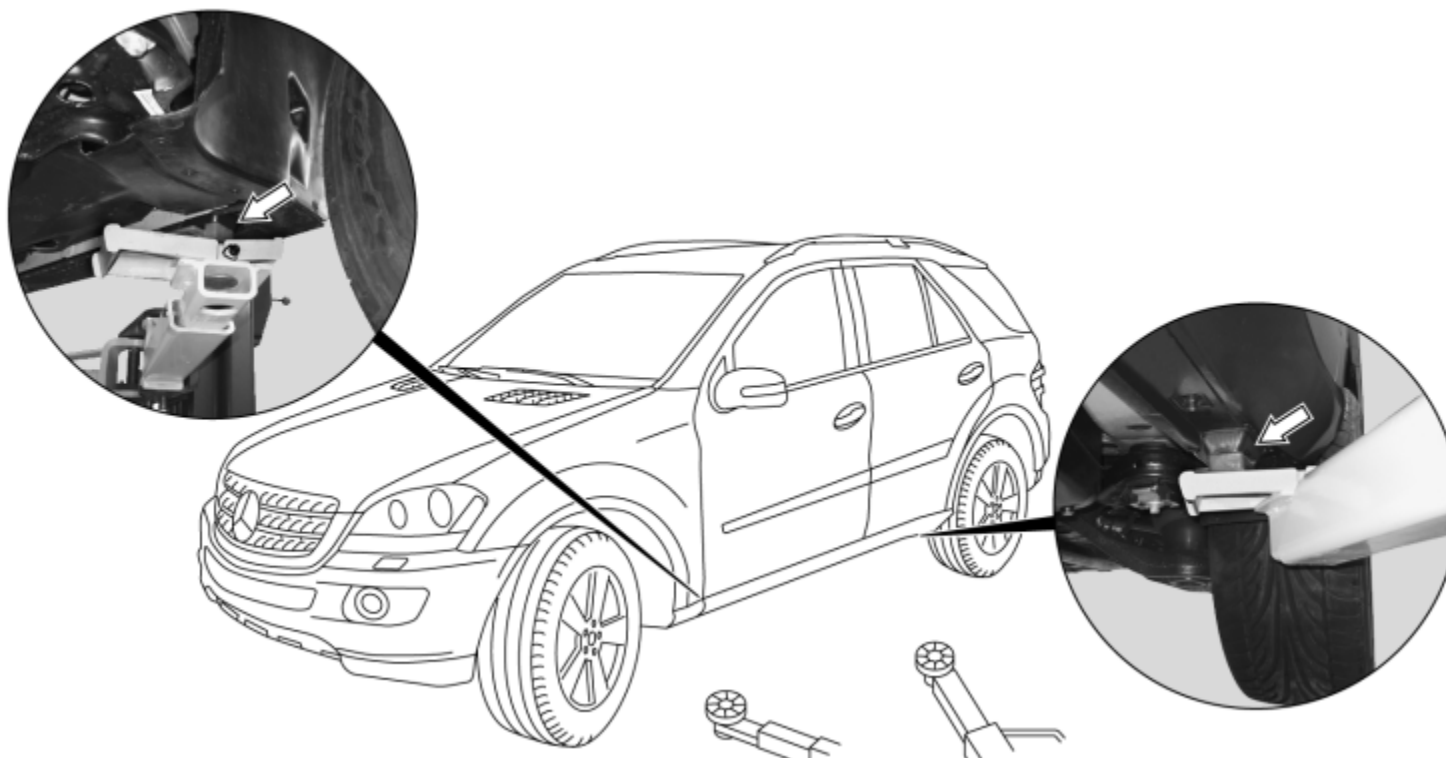


MODEL 164




P00.60-2046-09

Shown on model 164.1

	Lift/lower vehicle		
 Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A

 Danger!	Risk of accident caused by vehicle starting off on its own when jacked up. Risk of injury caused by rotating parts when working on running engine or drive train.	Ensure that supports are in a safe condition. An authorized person must occupy the driver's seat. Wear closed and snug-fitting work clothes. Do not grasp hot or rotating parts.	AS00.00-Z-0008-01A
1	Align vehicle between the columns of the lifting platform and position the four support plates at the lift support points of the body	 The vehicle must be driven onto a drive-on lifting platform in order to remove or install the underfloor panelings at the sides.	
2	Adapt the support plates of the lifting platform support arms to match the height of the vehicle	 Turn support plates until they contact the lift support points on the body.	
		 If the lifting platform support points are not positioned correctly at the lift support points provided on the vehicle for this purpose, damage may be caused to the vehicle longitudinal supports	
3.1	Secure the vehicle on the lifting platform against falling over.	 Only when removing major assemblies (e.g. engine, front axle carriers, axles).	
		 Lifting platform retainer	169 589 02 31 00
4	Raise vehicle with lifting platform	Two-post lift	WE58.40-Z-1001-05A
5	Lower vehicle in reverse order		
	Jack up/lower vehicle		
6	Lift vehicle with inspection pit lift or floor jack	 The plunger of the inspection pit lift or floor jack may only be applied to the front axle lift support point and rear axle lift support point, otherwise the axles, major assemblies or body may be damaged.	
		Pit lift	WE58.40-Z-1002-05A

		Floor jack	WE58.40-Z-1007-05A
7	Secure the vehicle against tilting and toppling.	i Position jack stand under the body lift support points.	
		Jack stand	WE58.40-Z-1008-05A
8	Lower vehicle in reverse order		

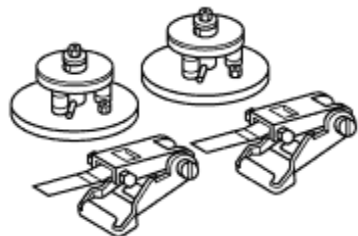

169 589 02 31 00

Lifting platform retainer

Workshop equipment

WE58.40-Z-1001-05A	Two-post lifting platform
WE58.40-Z-1002-05A	Pit lift
WE58.40-Z-1007-05A	Floor jack
WE58.40-Z-1008-05A	Jack stand