

Item	Designation	Coc
<u>A1</u>	Instrument cluster	57L
<u>F4</u>	Load compartment fuse and relay box	4A 13A 20A 28A 36A 44A 52A 60A 68A 76A
<u>F4f21</u>	Fuse 21	68A
<u>F4f27</u>	Fuse 27	75A
<u>F4f28</u>	Fuse 28	72A
<u>F4f30</u>	Fuse 30	40A
<u>F4f31</u>	Fuse 31	61A
<u>F4f32</u>	Fuse 32	31A
<u>F4f35</u>	Fuse 35	49A
<u>F4f36</u>	Fuse 36	53A
<u>F4f44</u>	Fuse 44	16A
<u>F4f45</u>	Fuse 45	19A
<u>F4f49</u>	Fuse 49	24A
<u>F4f53</u>	Fuse 53	38A
<u>F4f55</u>	Fuse 55	56A
<u>F4f58</u>	Fuse 58	65A
<u>F4f64</u>	Fuse 64	43A
<u>F4f65</u>	Fuse 65	46A
<u>F4f66</u>	Fuse 66	2D
<u>F4f67</u>	Fuse 67	9D
<u>F4f70</u>	Fuse 70	21D
<u>F4f71</u>	Fuse 71	23D
<u>F4f72</u>	Fuse 72	11D
<u>F4kL</u>	Trailer circuit 30X relay	11A
<u>F4kM</u>	Rear window defroster relay	13A
<u>F4kS</u>	Spare 1 (changeover contact)	15A
<u>F4kT</u>	Spare 2 (normally open contact)	18A
<u>F4kU</u>	Trailer circuit 30 relay	21A
<u>F4kV</u>	Reserve 2 relay	45A
<u>L13/1</u>	Right antenna coil	24L
<u>L13/3</u>	Left antenna coil (2)	27L
<u>L13/4</u>	Left antenna coil (1)	29L
<u>M2/29</u>	Rear air conditioning blower motor	9L
<u>M40</u>	Multicontour seat pneumatic pump	1L
<u>M40/1</u>	Pneumatic pump for dynamic seat control	3L
<u>N10/8</u>	Rear SAM control module	14L

<u>N15/7</u>	Transfer case control module	35L
<u>N25/7</u>	HS [SIH], seat ventilation and steering wheel heater control unit	61L
<u>N32/1</u>	Driver front seat adjustment control module with memory	72L
<u>N32/2</u>	Front passenger front seat adjustment control module with memory	75L
<u>N32/26</u>	Folding rear bench seat control unit	46L
<u>N40/3</u>	Amplifier for Sound System	50L
<u>N51</u>	Airmatic control unit	31L
<u>N72/2</u>	RCP [HBF] control module	68L
<u>N93</u>	Central gateway control module	65L
<u>N118/3</u>	Left fuel pump control unit	39L
<u>N118/4</u>	Right fuel pump control unit	42L
<u>N123/4</u>	Emergency call system control unit	53L
<u>R1</u>	Heated rear window	26L
<u>S1</u>	Exterior lamp switch	59L
<u>U66</u>	Valid for rear AC	8F
<u>U71</u>	Valid for seat adjustment with memory	70F
<u>U152</u>	Valid for engine 156	37F
<u>U154</u>	Valid for 164.1	26F
<u>U155</u>	Valid for 164.8	25F
<u>U502</u>	Valid for AIRmatic	30F
<u>U541</u>	Valid for TELE AID emergency call system	52F
<u>U552</u>	Valid for offroad package	33F
<u>U744</u>	Valid for steering wheel heater	59F
<u>U749</u>	Valid for multicontour seat (MCS [MKS])	1F
<u>U750</u>	Valid for dynamic seat (DS [FDS])	2F
<u>U881</u>	Valid for 3rd rear seat	44F
<u>W6</u>	Ground (left wheelhousing in trunk)	3H
<u>W8/1</u>	Ground (left tailgate)	26E
<u>X11/4</u>	Data link connector	66G
<u>X18</u>	Interior/cockpit connector	56H
<u>X29/6</u>	Center console intermediate connector	18H 67H
<u>X30/7</u>	Voltage distributor (CAN) connector	6L
<u>X58/4</u>	Cargo area socket	19L
<u>X58/11</u>	Trailer hitch socket (7-pin)	21L
<u>X58/20</u>	Right 2nd seat row socket	18L
<u>X58/28</u>	Electric brake control separation point	23L
<u>X122/3</u>	Rear AC connector	9H
<u>Z3/11</u>	Circuit 15 (fused) connector sleeve	57G
<u>Z7/88</u>	Fuel pump control unit circuit 30 connector sleeve	40G
<u>Z43</u>	Rear window defrost connector sleeve	29H

