
Model 166, 292

Shown on MODEL 166 with CODE 889 (KEYLESS-GO)


- 1 Washer
- 2 Electrical connector
- 3 Washer
- 4 Door handle

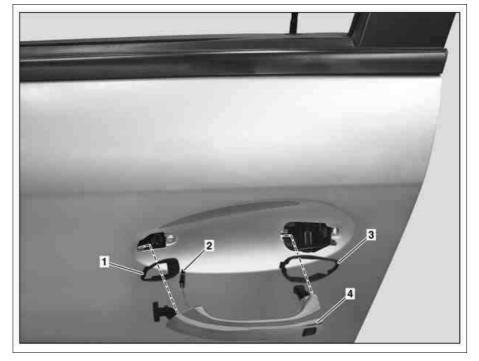

P72.10-3133-06

Shown on MODEL 166 with CODE 889 (KEYLESS-GO)


- 2 Electrical connector
- 4 Door handle

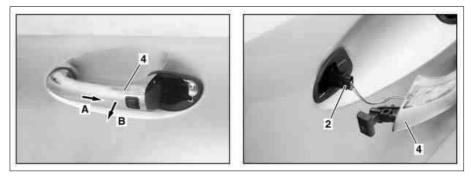

P72.10-3134-04

Shown on MODEL 166 with CODE 889 (KEYLESS-GO)


- 1 Washer
- 3 Washer

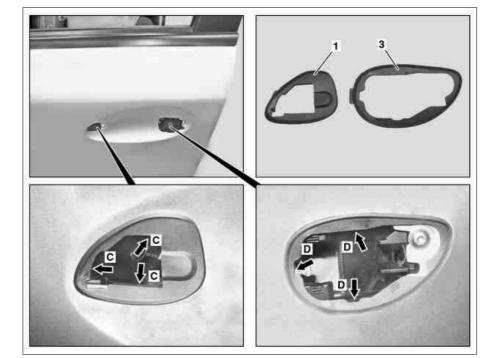

P72.10-3135-06

Shown on MODEL 166 with CODE 889 (KEYLESS-GO)

4 Door handle

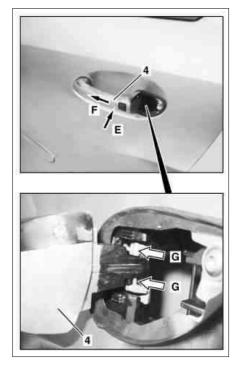

P72.10-3136-03

X	Remove		
1	Remove lock cylinder from front door	Model 166	AR72.10-P-4015GZ
		Model 292	AR72.10-P-4015GQC
2	Push door handle (4) slightly toward rear (arrow A) and remove from front door (arrow B)	i Do not damage the paintwork.	
3	Disconnect electrical connector (2)	Model 166 with code 889 (KEYLESS-GO) Model 292	
ж	Install		
4	Insert underlay (1, 3) into front door	Model 166 i Ensure that is it seated correctly and observe state. The underlays must be attached with their mounting tabs correctly inserted in the recesses in the door (arrows C and D).	
5	Connect electrical connector (2)	Model 166 with code 889 (KEYLESS-GO) Model 292	
6	Insert door handle (4) (arrow E) and slide toward front (arrow F)	 Ensure that door handle (4) is inserted properly (arrows G). Otherwise the door handle (4) can not be moved far enough toward front for installation. Do not damage the paintwork. Ensure that underlays do not move when inserting the door handle (4). 	
7	Install front door lock cylinder	Model 166	AR72.10-P-4015GZ
		Model 292	AR72.10-P-4015GQC
8	Perform function test		