


GF54.15-P-1256-15GZ	Fuse assignment of battery compartment prefuse box	Model 164	 GF
---------------------	--	-----------	--

## 78 to 91 Fuses

## F33 Battery compartment prefuse box

The battery compartment prefuse box is located next to the power supply battery below the front passenger seat.

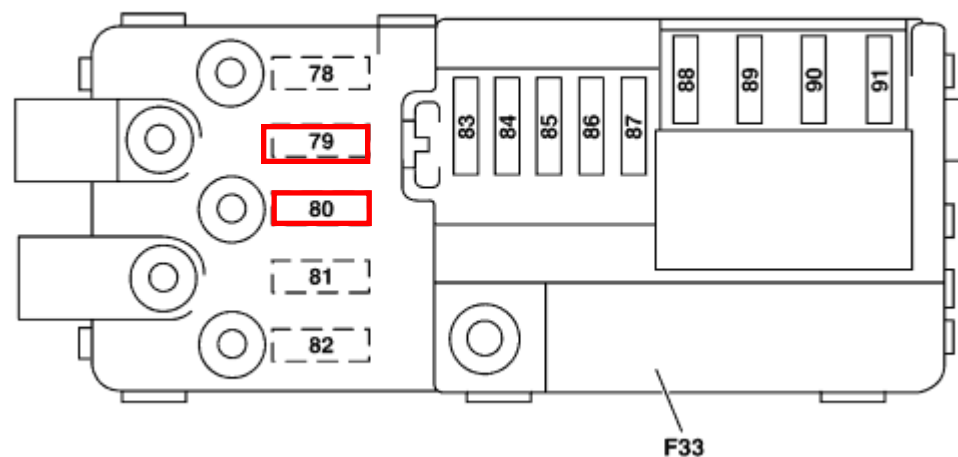

P54.15-2731-05

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
f78	30		● PTC heater booster (R22/3)	150
f79	30	6,0 RD	● Rear SAM control unit (N10/8)	60
f80	30	6,0 RD	● Rear SAM control unit (N10/8)	60
f81	-	-	-	-
f82	30	10,0 RD	● Load compartment fuse and relay box (F4)	150
f83	30	0.5 RD	● WSS (Weight Sensing System) control unit (N2/13)	5
f84	30	0.75 RDBK	● Restraint systems control unit (N2/7/)	10
f85	30	2.5 RDVT	● Intelligent servo module for DIRECT SELECT	30

			(A80)	
f86	30	4.0 RDBK	● Cockpit fuse box (F3)	30
f87	30	2.5 RDWH	<b>Valid for code (430) Offroad package:</b> ● Transfer case control unit (N15/7)	30
f88	30	6,0 RD	● Front SAM control unit (N10)	70
f89	30	6,0 RD	● Front SAM control unit (N10)	70
f90	30	6,0 RD	● Front SAM control unit (N10)	70
f91	30	RD 4.0	● Blower regulator (A32n1)	40