

| | | |
|------------------|---------------------------------|---------|
| AR83.25-P-1200GZ | Remove and install blower motor | 14.2.06 |
|------------------|---------------------------------|---------|

MODEL 164







P83.30-4163-07

Shown on model 164.1

- 1 Cover below instrument panel
 2 Bolts
 3 Electrical connectors

A32m1 Blower motor

|   | Remove/install | | |
|---|--|---|----------------------------------|
| 1 | Move passenger seat back | | |
| 2 | Switch off ignition and remove the transmitter key from the EIS [EZS] control unit |  On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m). | |
| 3 | Remove cover under instrument panel (1) |  Right side. | AR68.10-P-1520GZ |
| 4 | Disconnect electrical connectors (3) from blower motor (A32m1) | | |
| 5 | Unscrew bolt (2) | | |

| | | | |
|---|-------------------------------|--|--|
| 6 | Unclip wiring harness (arrow) | | |
| 7 | Remove blower motor (A32m1) | | |
| 8 | Install in the reverse order | | |