

GF07.61-P-3012V

ME-SFI fuel pump actuation, function

13.1.06


ENGINE 272.967 in MODEL 164.1
ENGINE 273.923 /963 in MODEL 164.8

Shown on engine 272.963 in model 171

17 Fuel rail
55/2 Fuel filter with fuel return regulator
75 Fuel tank

B70 Crankshaft Hall sensor
M3 Fuel pump
N2/7 Restraint systems control unit
N3/10 ME control unit
N10/1 Driver-side SAM control unit with fuse and relay module
N10/1kR Circuit 87 relay, engine
N10/2kA Fuel pump relay
N73 EIS [EZS] control unit
Y62 Fuel injection valves

CAN Data bus

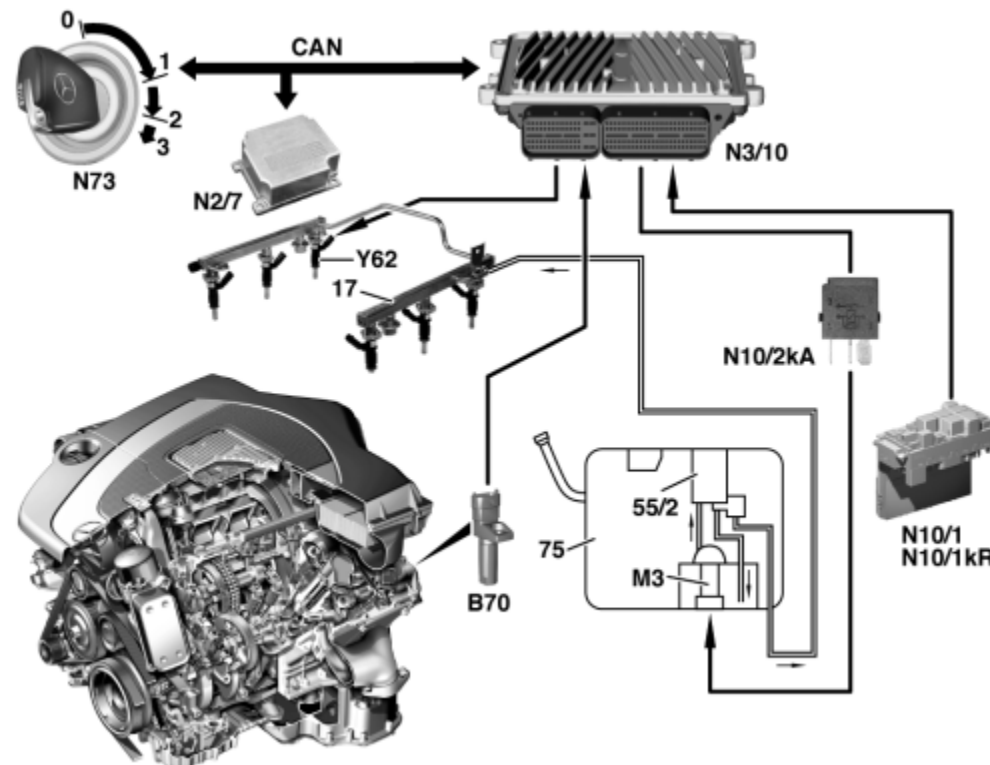

P07.61-3055-06

Fuel pump actuation has the following tasks:

- Actuate the fuel pump with ignition ON for approx. 5 s to ensure that it is completely filled. **The engine must be started before the fuel pump is actuated again.** In order to achieve short start times, protection against flooding cylinders is required, in particular following long shut-off times.
- To start the engine, actuate the fuel pump via start identification from terminal 50.
- When engine is running, actuate the fuel pump via the engine speed signal.
- In case of detected front crash, interrupt the actuation of the fuel pump.

The fuel pump is actuated over the fuel pump relay by a ground signal from the ME-SFI [ME] control unit. When the power contact on the relay is closed the fuel pump is connected to circuit 30 (B+) via circuit 87. Circuit 30 is protected by a 20 A fuse.

i If the fuel pump does not run, first check the voltage supply to the ME control unit, then the fuel pump fuse and the fuel pump line terminals.

	Component description for fuel injection valves		GF07.03-P-6010V
	Component description for crankshaft Hall sensor		GF07.04-P-6220V
	Component description for fuel distribution rail		GF07.61-P-6020V
	Component description for ME-SFI [ME] control unit		GF07.61-P-6000V
	Component description for fuel tank	Model 164.1	GF47.10-P-2000VC
	Component description for fuel pump		GF47.20-P-2000V
	Component description for fuel filter with fuel pressure regulator	Model 164	GF47.20-P-2110VB
	Component description for fuel pump relay		GF47.20-P-2010V