

<b>Item</b>	<b>Designation</b>	<b>Coordinate</b>
<u>B4/1</u>	Left fuel level sensor	11L 13L
<u>B4/1x1</u>	Left tank half fuel level sensor connector	10K 13K
<u>B4/2</u>	Right fuel level sensor	11L 14L
<u>B4/3</u>	Fuel tank pressure sensor	38L 51L
<u>F4</u>	Load compartment fuse and relay box	20L 28L 33L 42L 48L
<u>F4f51</u>	Fuse 51	41L 47L
<u>F4f57</u>	Fuse 57	17L
<u>F4kN</u>	Circuit 15 relay	49L
<u>F4kO</u>	Fuel pump relay module	19L
<u>F33</u>	Battery compartment prefuse box	35L
<u>F33f82</u>	Fuse 82	34K
<u>F58</u>	Engine compartment fuse and relay box	19A
<u>F58f105</u>	Fuse 105	18A
<u>M3</u>	Fuel pump (FP)	2L 15L
<u>M3x1</u>	Fuel pump connector	1K 15K
<u>M3/2</u>	Left fuel pump	9L
<u>M3/2x1</u>	Left fuel pump connector	9K
<u>N3/9</u>	CDI control module	23A
<u>N3/10</u>	ME-SFI [ME] control module	6A 27A 31A 38A 42A 48A
<u>N10/8</u>	Rear SAM control module	12A
<u>N118/3</u>	Left fuel pump control unit	9A
<u>N118/4</u>	Right fuel pump control unit	2A
<u>U127</u>	Valid for engine 272, engine 273 KE	25A 36A
<u>U151</u>	Valid for engine 113	29A 40A
<u>U152</u>	Valid for engine 156	1A 44A
<u>U153</u>	Valid for all except engine 156	15A
<u>U880</u>	Valid for engine 642	21A
<u>W17</u>	Ground (right rear seat)	15E
<u>X18/3</u>	Interior/fuel tank connector	1G 9G

		13G
		37H
		50G
<u>X25/2</u>	Engine compartment/interior compartment connector	5E
		17G
		22E
		26E
		37E
		39E
		44E
		50E
<u>Y58/4</u>	Activated charcoal filter shutoff valve	39L
		45L
<u>Z101/1</u>	Pulse width module fuel pump connector sleeve	5G
<u>Z101/2</u>	Fuel pump connector sleeve	7G