


Engine 607, 626, 628, 629, 642, 646, 647, 648, 651, 654

ENGINE 628, 629


i Cylinder 1 is opposite the power delivery side on the right cylinder head.

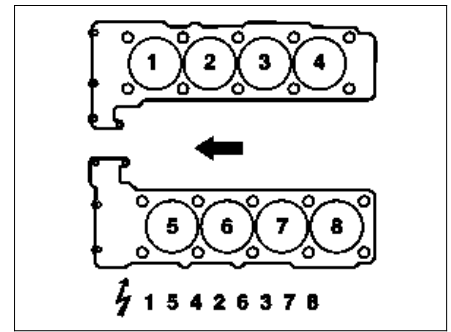

P01.00-2157-01

Engine 642


i Cylinder 1 is opposite the power delivery side on the right cylinder head.

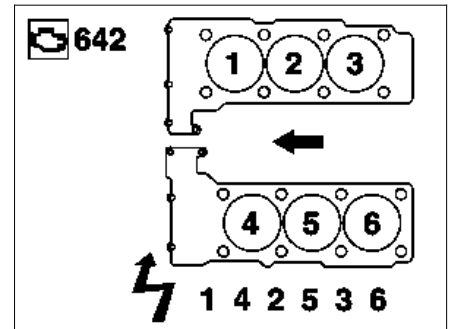

P00.00-3748-04

ENGINE 626, 646


i Cylinder 1 is located opposite the power delivery side.

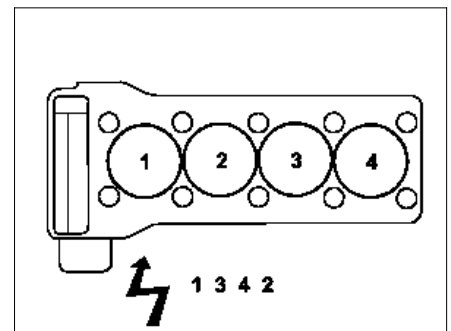

P01.00-0472-01

ENGINE 647


i Cylinder 1 is located opposite the power delivery side.

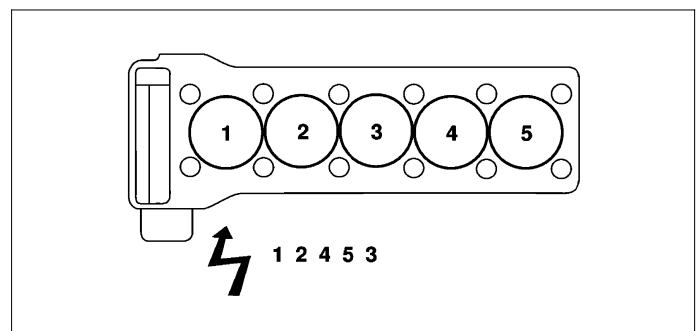

P15.10-2034-10

Engine 648


i Cylinder 1 is located opposite the power delivery side.

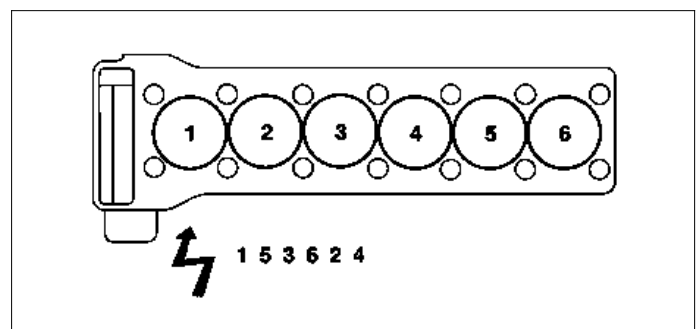

P15.10-2035-10

ENGINE 651, 654


i Cylinder 1 is located opposite the power delivery side.

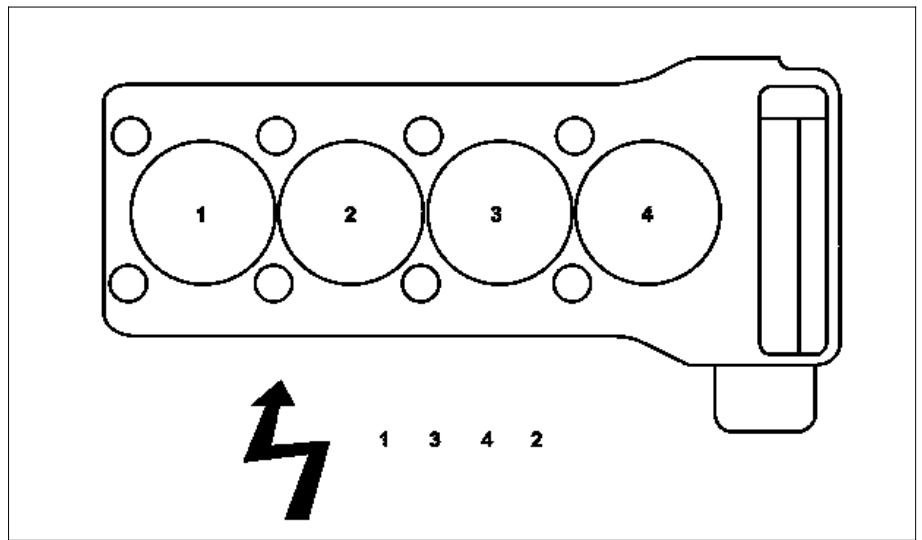

P15.10-2307-05

ENGINE 607

i Cylinder 1 is located opposite the power delivery side.

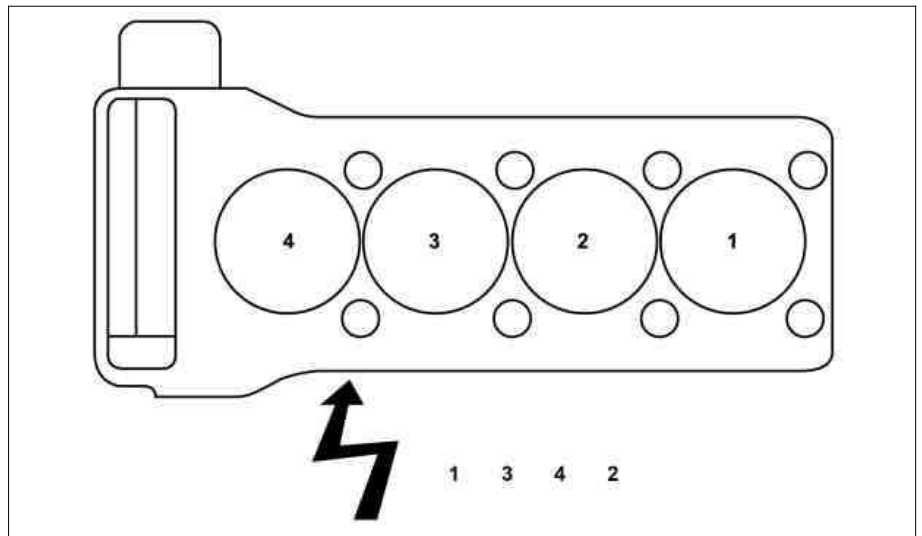

P01.00-3410-05