 

 
 
 


P88.40-2533-09

Shown on vehicle with anti-theft alarm system (ATA), code 551

- 1 Bolts
- 2 Left engine hood catch
- 3 Engine hood cable
- 4 Electrical connector
- 5 Bolts
- 6 Right engine hood catch
- 7 Outer sleeve mount
- S62 ATA [EDW] hood switch

	Remove/install		
 Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/ rear-end door or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Open engine hood		AR88.40-P-1000GZ
2	Unscrew bolts (1) and remove left engine hood lock (2) upward		*BA88.40-P-1003-01K
3	Unclip outer sleeve mount (7) from engine hood cable (3) on left engine hood lock.		
4.1	Disconnect electrical connector (4) from ATA hood switch (S62)	 Vehicles with anti-theft alarm system (ATA), code 551.	
5	Unscrew bolts (5) and remove right engine hood lock (6).		*BA88.40-P-1003-01K
6	Unclip outer sleeve mount (7) from engine hood cable (3) on right engine hood lock (6).		
7	Install in the reverse order		

 **Engine hood**

Number	Designation	Model	164.1/8
BA88.40-P-1003-01K	Screw, engine hood lock to radiator crossmember	Nm	12