

Engine 133, 152, 156, 157, 176, 177, 178, 256, 264, 266, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 607, 626, 629, 640, 642, 646, 651, 654, 656

Open clutch

1 Slide nose (2) of catch spring (3) to position (B).

⚠ Never pull on the eyelet (1).
The catch spring (3) will lose its pretension otherwise.

2 Detach hose on component.

3 Check sealing ring for damage.

If damaged



Replace hose.

Close clutch

4 Slide nose (2) of catch spring (3) to position (A).

5 Slide hose onto component until the catch spring (3) latches.

i Ensure clean free of grease connections.

6 Check connection by pulling a little at the hose.



P09.41-2318-01