

MODEL 164.1

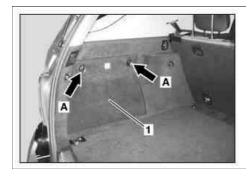

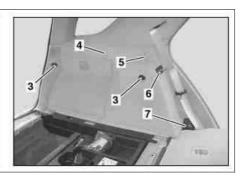




P68.30-3082-07

Trunk floor removed for better illustration

- 1 Cover
- 2 Stowage compartment
- 3 Anchoring hook
- 4 Paneling

- 5 Load compartment cover bracket
- 6 Anchoring hook cover
- 7 Cover

XX	Remove/Install		
1.1	Remove cover (1)	i Only vehicles with stowage compartment	
		i Unlock both rotary catches (arrows A) to open and remove cover	
2.1	Remove storage compartment (2)	i Only vehicles with stowage compartment	
		i Release both rotary catches (arrows B) to loosen and remove stowage compartment.	
		i Installation: First position stowage compartment at bottom of stay on paneling (4).	
3	Release rear seat backrest and fold down		
4	Remove lashing eyes (3)	i Unscrew one bolt each in center of lashing eye. i Installation: Observe positioning pins on lashing eyes	9
5	Unscrew bolt from luggage compartment cover bracket (5)		
6	Remove anchoring hood cover (6)		
7	Pry off cover (7)	Mounting wedge	*110589035900
8	Carefully unclip paneling (4) and remove	Mounting wedge	*110589035900
9	Install in the reverse order		

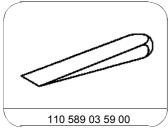

Mounting wedge