

ENGINE 113, 156, 272, 273, 276, 642 in MODEL 251


ENGINE 113, 156, 272, 273, 629 in MODEL 164

ENGINE 642 (except 642.940) in MODEL 164 (except 164.120/122)

Model 164

The coolant level on a cold engine must reach up to the marking (arrow) in the coolant expansion reservoir.

i If the coolant is warm, the coolant level in the coolant expansion reservoir is approx. 1 cm above the marking (arrow).

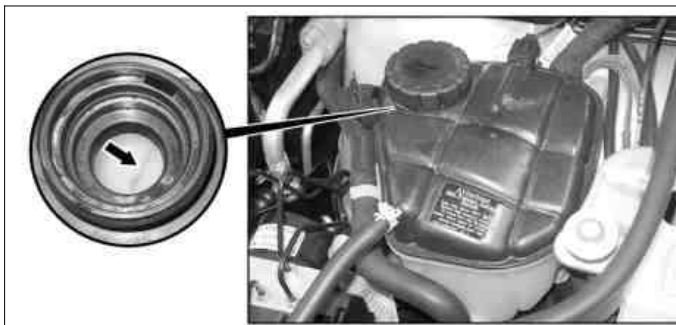


P20.00-2276-10

Model 251

The coolant level on a cold engine must reach up to the marking (arrow) in the coolant expansion reservoir.

i If the coolant is warm, the coolant level in the coolant expansion reservoir is approx. 1 cm above the marking (arrow).

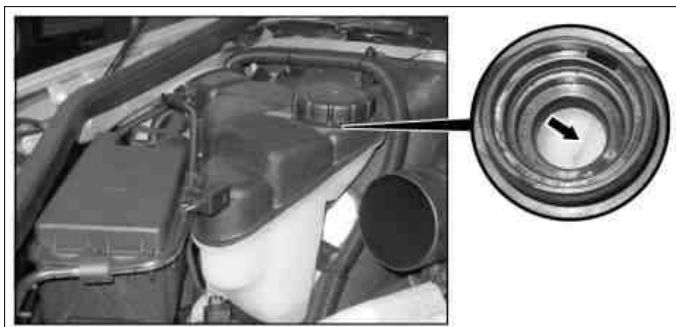

P20.00-2294-10