

Item	Designation	Coordin
<u>A2/5</u>	GPS antenna splitter	49L
<u>A2/19</u>	FM rear window antenna amplifier	60L
<u>A2/93</u>	Roof antenna module	52L
<u>A40/3</u>	COMAND operating, display and control module	4A 11A 20A 28A 36A 44A 52A 60A
<u>A40/4</u>	DVD player	38L
<u>A49/1</u>	Interference filter 1	63L
<u>A49/1x1</u>	Interference filter 1 input connector	63J
<u>F4</u>	Load compartment fuse and relay box	4L 68L
<u>F4f20</u>	Fuse 20	67L
<u>F4f25</u>	Fuse 25	3L
<u>H4/3</u>	Left rear door speaker	29L
<u>H4/4</u>	Right rear door speaker	32L
<u>H4/5</u>	Left front door speaker	23L
<u>H4/6</u>	Right front door speaker	26L
<u>H4/33</u>	Left front door tweeter	24L
<u>H4/34</u>	Right front door tweeter	27L
<u>H4/35</u>	Left rear door tweeter	30L
<u>H4/36</u>	Right rear door tweeter	33L
<u>N10/8</u>	Rear SAM control module	66A
<u>N66/8</u>	Rear audio control unit	15L 72L
<u>N66/10</u>	Backup camera voltage supply module	19L
<u>N123/4</u>	Emergency call system control unit	45L
<u>U500</u>	Not valid for Sound System	22A
<u>U541</u>	Valid for TELE AID emergency call system	43A
<u>U563</u>	Valid for rear entertainment (DVD)	37A
<u>U644</u>	Valid for walkman connection	34A
<u>U895</u>	Valid for rear audio	14A 70G
<u>U899</u>	Valid for backup camera	18A
<u>W17/1</u>	Ground (left rear seat)	6H
<u>W29/8</u>	Ground (left D-pillar)	61H
<u>X30/7</u>	Voltage distributor (CAN) connector	8L
<u>X35/1</u>	Left front door separation point	22E
<u>X35/2</u>	Right front door separation point	25E
<u>X35/3</u>	Left rear door separation point	28E
<u>X35/4</u>	Right rear door separation point	31E

<u>X39/45</u>	Walkman separation point	35L
<u>Z28/44</u>	Antenna actuation connector sleeve	63E
<u>Z204/6</u>	Circuit 31 left rear seat voltage distributor connector	6L