

P82.60-4772-09

## Shown on model 164.1, with USA version, code 494

- Radio
- 2 Instrument panel center section
- Bolts

- Electrical connector
- 5 Antenna cable connectors
- Latch

| ZX                                     | Remove/install   |  |                    |
|--|--|--|--------------------|
| <b>(3)</b>                             | Information on preventing damage to electronic components due to electrostatic discharge                               |  | AH54.00-P-0001-01A |
| 1 A D                                  | Read out coding of radio (1)  Connect STAR DIAGNOSIS and read out fault memory   | i Only when replacing radio and if it can still be read out using STAR DIAGNOSIS.  | AD00.00-P-2000-04A |
|  |  | STAR DIAGNOSIS diagnosis system  |                    |
| 2                                      | Switch off ignition and remove transmitter key from EIS control unit   | I On vehicles with code (889) Keyless-Go: Press Keyless-Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m). |                    |
| 3 use plastic pry tool at bottom edges | Disengage dashboard center part (2) at bottom edge (arrows A) and pull forward out of dashboard                        | Protect trim parts of the instrument panel and center console from scratches.  |                    |
| 4                                      | Remove bolts (3) and slide latches (6) on both sides downwards (arrow B)   |  |                    |
| 5                                      | Pull radio (1) out of installation opening and detach electrical connector (4) along with antenna cable connectors (5) | i Protect dashboard, center console trim parts and the radio from scratches.   |                    |
| 6                                      | Install in the reverse order   |  |                    |
| 7                                      | Code radio (1)   | i Only after installing a new radio.   |                    |
| <b>A</b> D                             | Connect STAR DIAGNOSIS and read out fault memory   | -  | AD00.00-P-2000-04A |
|  |  | STAR DIAGNOSIS diagnosis system  |                    |