

 
 
 
 
 


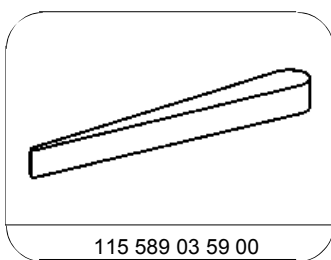
P68.10-3301-07

Shown on model 164.1 on left side air outlet

- 1 Cover
- 2 Side air outlet
- 3 Screwdriver
- 4 Bracket

- E10/2 Left air outlet illumination
- E10/3 Right air outlet illumination

 	Remove/install		
1	Unclip cover (1)	<ul style="list-style-type: none"> <li> From front.</li> <li> <b>Installation:</b> Ensure that guides are seated correctly.</li> <li> Long wedge</li> </ul>	*115589035900
2	Unclip side air outlet (2) with screwdriver (3).	<ul style="list-style-type: none"> <li> <b>Installation:</b> Ensure that side air outlet (2) arrests correctly.</li> </ul>	
3	Remove side air outlet (2) from instrument panel until left air outlet illumination (E10/2) or right air outlet illumination (E10/3) is accessible.		
4	Unclip left air outlet illumination (E10/2) or right air outlet illumination (E10/3) on side air outlet (2) from bracket (4).	<ul style="list-style-type: none"> <li> <b>Installation:</b> Ensure that left air outlet illumination (E10/2) or right air outlet illumination (E10/3) is positioned correctly.</li> </ul>	
5	Disconnect electrical connector from left air outlet illumination (E10/2) or right air outlet illumination (E10/3)		
6	Remove side air outlet (2)		
7	Install in the reverse order		



115 589 03 59 00

Long wedge