
MODEL 164





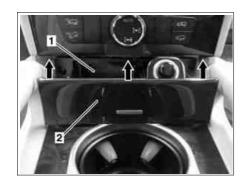

P68.20-3244-01

- P68.20-3242-01
- 2 Trim
- Ashtray housing

Bolts

3

4 Plug connection

XX	Remove/install		
1	Switch off ignition and remove transmitter key from EIS control unit	Press Keyless Go start/stop button repeatedly until the ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
2	Open ashtray housing (1)		
3	Lift paneling (2) (arrows)		
4	Close ashtray housing (1)		
5	Remove bolt (3)		
6	Remove lower control panel control unit	i Do not disconnect electrically	AR54.21-P-1263GZ
7	Slide ashtray housing (1) toward rear		
8	Turn ashtray housing (1) and disconnect electrical connector (4)		
9	Remove ashtray housing (1)		
10	Install in the reverse order		