



P68.10-3284-09

Front seat removed for better illustration

- 1 Bolt, engine hood release
- 2 Bolts, cover
- 3 Cover
- 4 Bracket

- 5 Air pipe
- 6 Support
- E17/16 Left front footwell lamp
- X11/4 Data link connector

↕	Removing		
1	Switch off ignition and remove transmitter key from EIS control unit	<b>i</b> On vehicles with code (889) KEYLESS-GO: Press KEYLESS-GO start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
2	Unscrew bolt for engine hood release (1)		
3	Unscrew bolts for cover (2)		
4	Lower cover (3)		
5	Disconnect electrical connector from front left footwell lamp (E17/16)		
6	Unlock electrical connector from data link connector (X11/4), remove		
7	Remove air pipe (5) from support (6)	<b>i</b> Lay air pipe (5) down in footwell. Do not disconnect electrical connector.	
8	Remove cover (3)		
↕	<b>Install</b>		
9	Install air pipe (5) on cover (3)		
10	Connect electrical connector to data link connector (X11/4)		
11	Connect electrical connector to front left footwell lamp (E17/16)		
12	Install cover (3)	<b>i</b> Ensure that air pipe (5) and bracket (4) are installed properly.	
13	Screw in bolt for engine hood release (1)		
14	Screw in bolts for cover (2)		